

FLOOR CEILING FAN COIL UNIT

SERVICE MANUAL

SF-XXXXF3



sinclair
AIR CONDITIONING

“Original instructions”

IMPORTANT NOTE:

Read this manual carefully before installing or operating your new air conditioning unit. Make sure to save this manual for future reference.

2nd Generation Ceiling & Floor DC Fan Coil Unit

1.	Features	2
2.	External Appearance	2
3.	Standard with a variety of control functions	2
4.	Standard PCB compatible with more functions	2
5.	Products Lineup.....	3
6.	Nomenclature	3
7.	Specifications	4
8.	Dimensions.....	43
9.	Sound Levels.....	45
10.	Service Spaces.....	46
11.	Wiring Diagrams	47
12.	Installation	50
	12.1 Transport and handling	50
	12.2 Storage conditions	51
	12.3 Service spaces.....	51
	12.4 Units installation.....	51
	12.5 Maintenance	58
	12.6 Troubleshooting	61

1. Features

✚ Flexible for installation, designed for horizontal/vertical, concealed/cabinet application

Ceiling Installation



Floor Installation



✚ High efficiency and low operating sound level

Due to the DC fan motor, the unit operates in lower power consumption and lower operating sound level.

✚ Meet CE certification requirements

The unit can meet the latest CE certification requirements for using DC fan motor.



2. External Appearance



3. Standard with a variety of control functions

✚ Seven fan speed control

Seven Fan speed control function must use the new controller (KJRP-75A) and only with 2nd generation indoor unit.



KJRP-75A

✚ Centralized control and Modbus

The centralized control function can be connected through the network module whereas the Modbus can be connected through the reserve port.

4. Standard PCB compatible with more functions

✚ Forced fan running function

With/without forced fan on can be set by PCB switch, field adjustable.

Hysteresis temperature setting

Hysteresis temperature can be set in heating and cooling mode by PCB switch, field adjustable.

5. Products Lineup

Model	Air volume (CFM)	External static pressure	Power supply
SF-250F3	250	0 Pa	220~240V-1Ph-50Hz 220~240V-1Ph-60Hz
SF-350F3	350		
SF-700F3	700		
SF-800F3	800		

7. Specifications

Model			SF-250F3
Power supply		V/Ph/Hz	220-240/1/50
Air flow (H/M/L)	m ³ /h		400/315/190
	CFM		235/185/112
External static pressure		Pa	
Cooling	Capacity (H/M/L)	kW	2.35/1.94/1.19
	Water flow rate	L/h	410/350/230
	Water pressure drop	kPa	13.3/9.98/4.59
Heating	Capacity (H/M/L)	kW	2.60/2.11/1.34
	Water flow rate	L/h	470/390/240
	Water pressure drop	kPa	14.3/10.33/4.5
Power input (H/M/L)		W	17/12/7
Rated current		A	0.20
Sound power level	(H/M/L)	dB(A)	43/37/29
Fan motor	Type		Low noise DC fan motor
	Quantity		1
Fan	Type		Centrifugal, forward-curved Blades
	Quantity		2
Coil	Row		3
	Max. working pressure	MPa	1.6
	Diameter	mm	Φ7.94
H2 Body	Net dimensions (W×H×D)	mm	495×200×1020
	Packing size (W×H×D)	mm	595×300×1125
	Net weight	kg	21.5
	Gross weight	kg	27.5
H3 Body	Net dimensions (W×H×D)	mm	455x200x858
	Packing size (W×H×D)	mm	595×300×1125
	Net weight	kg	16.5
	Gross weight	kg	22.5
Water inlet/outlet pipe		inch	G3/4
Drain pipe		mm	ODΦ18.5

Notes:

1. H: High fan speed; M: Medium fan speed; L: Low fan speed.
2. Cooling conditions: Entering water 7℃, leaving water 12℃, Entering air temperature 27℃ DB/19℃ WB.
3. Heating conditions: Entering water 45℃, leaving water 40℃, Entering air temperature 20℃ DB/15℃ WB.
4. Noise is tested in a reverberation chamber.

Model			SF-350F3
Power supply		V/Ph/Hz	220-240/1/50
Air flow (H/M/L)		m ³ /h	595/470/340
		CFM	350/276/200
External static pressure		Pa	0
Cooling	Capacity (H/M/L)	kW	3.50/2.89/2.22
	Water flow rate	L/h	610/510/400
	Water pressure drop	kPa	34.1/24.63/15.39
Heating	Capacity (H/M/L)	kW	3.50/2.87/2.19
	Water flow rate	L/h	680/560/430
	Water pressure drop	kPa	35.1/24.41/14.82
Power input (H/M/L)		W	26/17/10
Rated current		A	0.26
Sound power level	(H/M/L)	dB(A)	52/45/37
Fan motor	Type		Low noise DC fan motor
	Quantity		1
Fan	Type		Centrifugal, forward-curved Blades
	Quantity		2
Coil	Row		3
	Max. working pressure	MPa	1.6
	Diameter	mm	Φ7.94
H2 Body	Net dimensions (W×H×D)	mm	495×200×1240
	Packing size (W×H×D)	mm	595×300×1345
	Net weight	kg	25.5
	Gross weight	kg	32.5
H3 Body	Net dimensions (W×H×D)	mm	455x200x1078
	Packing size (W×H×D)	mm	595×300×1345
	Net weight	kg	19.5
	Gross weight	kg	26.5
Water inlet/outlet pipe		inch	G3/4
Drain pipe		mm	ODΦ18.5

Notes:

1. H: High fan speed; M: Medium fan speed; L: Low fan speed.
2. Cooling conditions: Entering water 7℃, leaving water 12℃, Entering air temperature 27℃ DB/19℃ WB.
3. Heating conditions: Entering water 45℃, leaving water 40℃, Entering air temperature 20℃ DB/15℃ WB.
4. Noise is tested in a reverberation chamber.

Model			SF-700F3	SF-800F3
Power supply		V/Ph/Hz	220-240/1/50	220-240/1/50
Air flow (H/M/L)		m³/h	1190/855/505	1360/1015/685
		CFM	700/503/297	800/597/403
External static pressure		Pa	0	
Cooling	Capacity (H/M/L)	kW	5.60/4.47/3.14	7.35/6.12/4.57
	Water flow rate	L/h	1010/800/560	1280/1100/810
	Water pressure drop	kPa	50.7/33.38/17.73	44.1/33.7/19.41
Heating	Capacity (H/M/L)	kW	6.00/4.77/3.36	8.05/6.46/4.71
	Water flow rate	L/h	1140/920/640	1400/1140/840
	Water pressure drop	kPa	55.5/37.66/19.27	46.9/31.9/18.16
Power input (H/M/L)		W	96/44/17	113/53/22
Rated current		A	0.85	0.95
Sound power level	(H/M/L)	dB(A)	65/58/56	64/58/49
Fan motor	Type		Low noise DC fan motor	
	Quantity		1	1
Fan	Type		Centrifugal, forward-curved Blades	
	Quantity		3	3
Coil	Row		3	3
	Max. working pressure	MPa	1.6	1.6
	Diameter	mm	Φ7.94	Φ7.94
H2 Body	Net dimensions (W×H×D)	mm	495×200×1360	591×200×1360
	Packing size (W×H×D)	mm	595×300×1465	695×300×1465
	Net weight	kg	28.5	32.5
	Gross weight	kg	36.0	41.0
H3 Body	Net dimensions (W×H×D)	mm	455×200×1198	551×200×1198
	Packing size (W×H×D)	mm	595×300×1465	695×300×1465
	Net weight	kg	22	25
	Gross weight	kg	29.5	33.5
Water inlet/outlet pipe		inch	G3/4	G3/4
Drain pipe		mm	ODΦ18.5	ODΦ18.5

Notes:

1. H: High fan speed; M: Medium fan speed; L: Low fan speed.
2. Cooling conditions: Entering water 7℃, leaving water 12℃, Entering air temperature 27℃ DB/19℃ WB.
3. Heating conditions: Entering water 45℃, leaving water 40℃, Entering air temperature 20℃ DB/15℃ WB.
4. Noise is tested in a reverberation chamber.

Capacity Table

Cooling Capacity Table

SF-250F3																						
EWT	ΔT	Indoor temp(W.B.)	Indoor temperature (D.B.)																			
			21				23				25				27				29			
			TC	SC	WF	WPD	TC	SC	WF	WPD	TC	SC	WF	WPD	TC	SC	WF	WPD	TC	SC	WF	WPD
°C	°C	°C	kW	kW	m³/h	kPa	kW	kW	m³/h	kPa	kW	kW	m³/h	kPa	kW	kW	m³/h	kPa	kW	kW	m³/h	kPa
5	3	15	2.27	1.7	0.65	25.38	2.26	1.93	0.65	25.07	2.31	2.19	0.66	25.71	2.43	2.43	0.69	28.34	2.66	2.66	0.76	33.53
		17	3.04	1.74	0.87	42.92	3.02	1.97	0.86	42.4	3	2.2	0.86	41.88	2.98	2.43	0.85	41.39	2.96	2.65	0.85	40.99
		19	3.79	1.75	1.08	64.1	3.76	1.98	1.08	63.33	3.74	2.21	1.07	62.58	3.7	2.38	1.06	61.03	3.69	2.66	1.06	61.08
		20	-	-	-	-	4.16	1.99	1.19	75.99	4.13	2.22	1.18	75.08	4.1	2.44	1.17	74.18	4.07	2.66	1.17	73.3
	4	15	1.39	1.26	0.3	6.38	1.61	1.57	0.35	8.31	1.93	1.92	0.41	11.3	2.23	2.23	0.48	14.62	2.5	2.5	0.54	17.96
		17	2.71	1.58	0.58	20.69	2.69	1.81	0.58	20.34	2.66	2.04	0.57	19.99	2.64	2.26	0.57	20.05	2.7	2.51	0.58	20.55
		19	3.63	1.67	0.78	34.91	3.6	1.91	0.77	34.5	3.58	2.13	0.77	34.04	3.55	2.36	0.76	33.61	3.53	2.58	0.76	33.18
		20	-	-	-	-	4.01	1.92	0.86	41.85	3.98	2.15	0.85	41.36	3.94	2.34	0.85	40.68	3.93	2.59	0.84	40.4
	5	15	1.25	1.18	0.21	3.34	1.41	1.41	0.24	4.4	1.62	1.62	0.28	5.63	1.88	1.88	0.32	7.3	2.21	2.21	0.38	9.69
		17	1.52	1.06	0.26	5.04	1.58	1.31	0.27	5.42	1.71	1.58	0.29	6.22	1.93	1.88	0.33	7.67	2.23	2.21	0.38	9.86
		19	3.21	1.48	0.55	18.67	3.17	1.7	0.54	18.34	3.14	1.93	0.54	18.01	3.11	2.15	0.53	17.69	3.08	2.37	0.53	17.33
		20	-	-	-	-	3.73	1.78	0.64	24.48	3.7	2.01	0.63	24.11	3.67	2.24	0.63	23.77	3.64	2.46	0.62	23.42
	6	15	1.15	1.11	0.17	1.83	1.33	1.33	0.19	2.52	1.53	1.53	0.22	3.51	1.72	1.72	0.25	4.54	1.93	1.93	0.28	5.55
		17	1.36	1.01	0.19	2.66	1.44	1.24	0.21	3.07	1.57	1.49	0.22	3.74	1.73	1.72	0.25	4.56	1.93	1.93	0.28	5.57
		19	1.8	0.88	0.26	4.93	1.79	1.12	0.26	4.88	1.83	1.37	0.26	5.04	1.92	1.62	0.27	5.47	2.06	1.89	0.29	6.21
		20	-	-	-	-	2.67	1.32	0.38	9.73	2.43	1.46	0.35	8.28	2.35	1.67	0.34	7.79	2.51	1.96	0.36	8.78
7	3	15	1.57	1.36	0.45	12.9	1.71	1.65	0.49	15.05	1.92	1.92	0.55	18.46	2.18	2.18	0.62	23.09	2.42	2.42	0.69	27.9
		17	2.52	1.49	0.72	29.98	2.5	1.72	0.71	29.56	2.48	1.95	0.71	29.14	2.47	2.18	0.71	28.98	2.51	2.42	0.72	29.84
		19	3.28	1.5	0.94	48.54	3.26	1.74	0.93	47.94	3.24	1.97	0.92	47.37	3.22	2.2	0.92	46.78	3.19	2.42	0.91	46.22
		20	-	-	-	-	3.65	1.75	1.04	59.09	3.63	1.98	1.04	58.37	3.6	2.2	1.03	57.66	3.58	2.43	1.02	56.95
	4	15	1.1	1.09	0.24	4.17	1.32	1.32	0.28	5.71	1.64	1.64	0.35	8.34	1.97	1.97	0.42	11.57	2.26	2.26	0.48	14.74
		17	1.44	1.03	0.31	6.67	1.66	1.35	0.36	8.56	1.9	1.68	0.41	10.8	2.08	1.98	0.45	12.75	2.28	2.26	0.49	14.94
		19	3.06	1.41	0.66	25.36	3.04	1.64	0.65	24.99	3.01	1.87	0.65	24.62	2.99	2.1	0.64	24.26	2.96	2.32	0.63	23.89
		20	-	-	-	-	3.49	1.67	0.75	32.06	3.46	1.9	0.74	31.66	3.44	2.13	0.74	31.27	3.41	2.35	0.73	30.87
	5	15	1.02	1.02	0.17	2.07	1.21	1.21	0.21	3.19	1.41	1.41	0.24	4.36	1.64	1.64	0.28	5.65	1.94	1.94	0.33	7.61
		17	1.16	0.91	0.2	2.9	1.27	1.16	0.22	3.56	1.42	1.4	0.24	4.43	1.64	1.64	0.28	5.66	1.95	1.95	0.33	7.65
		19	1.7	0.84	0.29	6.01	1.67	1.08	0.29	5.86	1.75	1.34	0.3	6.33	2.35	1.67	0.41	13.3	2.27	2	0.39	10.01
		20	-	-	-	-	3.05	1.48	0.52	16.86	3.02	1.71	0.52	16.54	2.99	1.93	0.51	16.22	2.95	2.15	0.51	15.9
	6	15	0.95	0.94	0.14	1.22	1.14	1.14	0.16	1.78	1.33	1.33	0.19	2.59	1.52	1.52	0.22	3.58	1.72	1.72	0.25	4.51
		17	1.04	0.85	0.15	1.47	1.17	1.1	0.17	1.9	1.34	1.33	0.19	2.61	1.53	1.53	0.22	3.59	1.73	1.73	0.25	4.52
		19	1.39	0.73	0.2	2.9	1.4	0.97	0.2	2.97	1.48	1.22	0.21	3.36	1.6	1.47	0.23	3.93	1.75	1.71	0.25	4.63
		20	-	-	-	-	1.62	0.92	0.23	4.06	1.64	1.16	0.24	4.13	1.72	1.41	0.25	4.5	1.85	1.67	0.27	5.1
9	3	15	1.01	1.01	0.29	5.93	1.37	1.37	0.39	10.02	1.67	1.67	0.48	14.22	1.93	1.93	0.55	18.49	2.19	2.19	0.62	22.97
		17	1.84	1.19	0.53	16.95	1.82	1.43	0.52	16.65	1.87	1.67	0.53	17.39	1.98	1.93	0.57	19.23	2.18	2.18	0.63	23.05
		19	2.73	1.26	0.78	34.6	2.72	1.5	0.78	34.17	2.7	1.73	0.77	33.73	2.68	1.96	0.77	33.32	2.66	2.19	0.76	32.93
		20	-	-	-	-	3.11	1.5	0.89	43.8	3.09	1.74	0.88	43.24	3.07	1.96	0.88	42.71	3.05	2.19	0.87	42.18
	4	15	0.9	0.9	0.19	2.71	1.09	1.09	0.24	4.13	1.35	1.35	0.29	5.92	1.7	1.7	0.37	8.86	2.01	2.01	0.43	11.9
		17	0.98	0.83	0.21	3.34	1.12	1.08	0.24	4.25	1.35	1.35	0.29	5.93	1.7	1.7	0.37	8.89	2.01	2.01	0.43	11.95
		19	2.33	1.1	0.5	15.54	2.31	1.33	0.5	15.21	2.28	1.55	0.49	14.88	2.27	1.78	0.49	14.75	2.32	2.03	0.5	15.37
		20	-	-	-	-	2.88	1.41	0.62	22.62	2.85	1.64	0.61	22.27	2.83	1.86	0.61	21.93	2.8	2.09	0.6	21.57
	5	15	0.82	0.82	0.14	1.32	1.02	1.02	0.17	2.14	1.21	1.21	0.21	3.27	1.41	1.41	0.24	4.35	1.68	1.68	0.29	5.85
		17	0.87	0.77	0.15	1.47	1.02	1.01	0.18	2.17	1.21	1.21	0.21	3.28	1.42	1.42	0.24	4.36	1.68	1.68	0.29	5.87
		19	1.17	0.64	0.2	3.02	1.2	0.89	0.21	3.21	1.3	1.14	0.22	3.75	1.45	1.4	0.25	4.56	1.69	1.68	0.29	5.95
		20	-	-	-	-	1.42	0.84	0.24	4.38	1.47	1.09	0.25	4.63	1.62	1.37	0.28	5.46	1.93	1.71	0.33	7.5
	6	15	0.75	0.75	0.11	0.83	0.94	0.94	0.14	1.21	1.14	1.14	0.16	1.81	1.33	1.33	0.19	2.66	1.52	1.52	0.22	3.57
		17	0.77	0.72	0.11	0.86	0.94	0.94	0.14	1.21	1.14	1.14	0.16	1.81	1.33	1.33	0.19	2.66	1.52	1.52	0.22	3.58
		19	0.99	0.58	0.14	1.33	1.06	0.84	0.15	1.56	1.19	1.09	0.17	2.02	1.34	1.32	0.19	2.72	1.53	1.53	0.22	3.59
		20	-	-	-	-	1.22	0.77	0.17	2.14	1.29	1.02	0.18	2.48	1.41	1.27	0.2	3.03	1.55	1.5	0.22	3.7

(Continued)

SF-250F3																						
EWT	ΔT	Indoor temp(W.B.)	Indoor temperature (D.B.)																			
			21				23				25				27				29			
			TC	SC	WF	WPD	TC	SC	WF	WPD	TC	SC	WF	WPD	TC	SC	WF	WPD	TC	SC	WF	WPD
°C	°C	°C	kW	kW	m^3/h	kPa	kW	kW	m^3/h	kPa	kW	kW	m^3/h	kPa	kW	kW	m^3/h	kPa	kW	kW	m^3/h	kPa
11	3	15	0.77	0.77	0.22	3.7	1.05	1.05	0.3	6.3	1.4	1.4	0.4	10.37	1.68	1.68	0.48	14.38	1.93	1.93	0.56	18.54
		17	0.8	0.75	0.23	3.95	1.06	1.06	0.31	6.4	1.4	1.4	0.4	10.39	1.69	1.69	0.48	14.44	1.94	1.94	0.56	18.61
		19	2.11	1	0.61	21.53	2.09	1.24	0.6	21.16	2.07	1.47	0.59	20.8	2.06	1.7	0.59	20.67	2.1	1.94	0.6	21.48
		20	-	-	-	-	2.53	1.26	0.73	29.91	2.51	1.49	0.72	29.52	2.49	1.72	0.72	29.14	2.47	1.95	0.71	28.73
	4	15	0.7	0.7	0.15	1.5	0.89	0.89	0.19	2.75	1.1	1.1	0.24	4.08	1.39	1.39	0.3	6.16	1.74	1.74	0.37	9.1
		17	0.71	0.69	0.15	1.54	0.89	0.89	0.19	2.76	1.1	1.1	0.24	4.09	1.4	1.4	0.3	6.19	1.74	1.74	0.37	9.14
		19	0.94	0.56	0.2	3.07	1	0.82	0.22	3.48	1.15	1.08	0.25	4.4	1.44	1.4	0.31	6.53	1.76	1.75	0.38	9.34
		20	-	-	-	-	1.97	1.04	0.42	11.32	1.92	1.26	0.41	10.87	1.95	1.51	0.42	11.12	2.05	1.77	0.44	12.23
	5	15	0.63	0.63	0.11	0.81	0.82	0.82	0.14	1.33	1.02	1.02	0.17	2.19	1.21	1.21	0.21	3.27	1.43	1.43	0.25	4.36
		17	0.63	0.63	0.11	0.82	0.82	0.82	0.14	1.33	1.02	1.02	0.18	2.2	1.21	1.21	0.21	3.27	1.43	1.43	0.25	4.37
		19	0.78	0.51	0.13	1.18	0.88	0.76	0.15	1.56	1.03	1	0.18	2.28	1.21	1.21	0.21	3.28	1.43	1.43	0.25	4.39
		20	-	-	-	-	1	0.69	0.17	2.14	1.1	0.94	0.19	2.68	1.24	1.18	0.21	3.43	1.44	1.43	0.25	4.41
	6	15	0.55	0.55	0.08	0.57	0.75	0.75	0.11	0.81	0.94	0.94	0.14	1.21	1.14	1.14	0.16	1.85	1.33	1.33	0.19	2.72
		17	0.56	0.56	0.08	0.56	0.75	0.75	0.11	0.81	0.94	0.94	0.14	1.22	1.14	1.14	0.16	1.86	1.33	1.33	0.19	2.72
		19	0.64	0.45	0.09	0.65	0.78	0.71	0.11	0.86	0.95	0.94	0.14	1.23	1.14	1.14	0.16	1.86	1.33	1.33	0.19	2.73
		20	-	-	-	-	0.86	0.64	0.12	1.02	0.99	0.89	0.14	1.36	1.15	1.12	0.17	1.92	1.33	1.33	0.19	2.73
13	3	15	0.57	0.57	0.16	1.92	0.78	0.78	0.22	3.64	1.09	1.09	0.31	6.58	1.42	1.42	0.41	10.44	1.69	1.69	0.48	14.26
		17	0.58	0.57	0.16	1.92	0.78	0.78	0.22	3.65	1.09	1.09	0.31	6.61	1.42	1.42	0.41	10.48	1.69	1.69	0.49	14.32
		19	0.98	0.77	0.3	6.11	0.84	0.75	0.24	4.15	1.19	1.11	0.34	7.65	1.45	1.42	0.42	10.85	1.7	1.7	0.49	14.34
		20	-	-	-	-	1.79	0.97	0.51	15.83	1.77	1.2	0.51	15.44	1.78	1.44	0.51	15.61	1.85	1.69	0.53	16.79
	4	15	0.5	0.5	0.11	0.8	0.7	0.7	0.15	1.53	0.89	0.89	0.19	2.78	1.11	1.11	0.24	4.1	1.45	1.45	0.31	6.49
		17	0.5	0.5	0.11	0.8	0.7	0.7	0.15	1.54	0.89	0.89	0.19	2.79	1.11	1.11	0.24	4.11	1.45	1.45	0.31	6.52
		19	0.57	0.43	0.12	1	0.71	0.68	0.15	1.62	0.89	0.89	0.19	2.79	1.11	1.11	0.24	4.13	1.45	1.45	0.31	6.55
		20	-	-	-	-	0.8	0.62	0.17	2.14	0.93	0.87	0.2	2.99	1.12	1.11	0.24	4.15	1.46	1.45	0.31	6.57
	5	15	0.43	0.43	0.07	0.51	0.63	0.63	0.11	0.79	0.82	0.82	0.14	1.33	1.01	1.01	0.17	2.24	1.21	1.21	0.21	3.22
		17	0.43	0.43	0.07	0.51	0.63	0.63	0.11	0.79	0.82	0.82	0.14	1.34	1.01	1.01	0.17	2.24	1.21	1.21	0.21	3.23
		19	0.46	0.38	0.08	0.54	0.63	0.62	0.11	0.8	0.82	0.82	0.14	1.34	1.02	1.02	0.17	2.25	1.21	1.21	0.21	3.24
		20	-	-	-	-	0.68	0.57	0.12	0.9	0.83	0.81	0.14	1.39	1.02	1.01	0.17	2.25	1.21	1.21	0.21	3.24
	6	15	0.35	0.35	0.05	0.34	0.55	0.55	0.08	0.54	0.75	0.75	0.11	0.78	0.94	0.94	0.13	1.21	1.13	1.13	0.16	1.89
		17	0.35	0.35	0.05	0.34	0.55	0.55	0.08	0.54	0.75	0.75	0.11	0.78	0.94	0.94	0.14	1.22	1.14	1.14	0.16	1.89
		19	0.36	0.33	0.05	0.35	0.55	0.55	0.08	0.54	0.75	0.75	0.11	0.79	0.94	0.94	0.14	1.22	1.14	1.14	0.16	1.9
		20	-	-	-	-	0.58	0.51	0.08	0.56	0.75	0.75	0.11	0.79	0.94	0.94	0.14	1.22	1.14	1.14	0.16	1.9
15	3	15	0.38	0.38	0.11	0.79	0.57	0.57	0.16	1.97	0.78	0.78	0.22	3.66	1.13	1.13	0.32	6.92	1.43	1.43	0.41	10.56
		17	0.38	0.38	0.11	0.79	0.57	0.57	0.16	1.98	0.78	0.78	0.23	3.67	1.13	1.13	0.32	6.95	1.44	1.44	0.41	10.6
		19	0.39	0.36	0.11	0.84	0.57	0.57	0.16	1.97	0.79	0.79	0.23	3.68	1.13	1.13	0.33	6.98	1.44	1.44	0.41	10.65
		20	-	-	-	-	0.61	0.54	0.17	2.27	0.79	0.79	0.23	3.69	1.13	1.13	0.33	6.98	1.44	1.44	0.41	10.66
	4	15	0.3	0.3	0.07	0.43	0.5	0.5	0.11	0.78	0.7	0.7	0.15	1.56	0.89	0.89	0.19	2.77	1.13	1.13	0.24	4.2
		17	0.3	0.3	0.07	0.43	0.5	0.5	0.11	0.78	0.7	0.7	0.15	1.57	0.89	0.89	0.19	2.78	1.14	1.14	0.24	4.22
		19	0.3	0.3	0.07	0.43	0.5	0.5	0.11	0.78	0.7	0.7	0.15	1.57	0.89	0.89	0.19	2.78	1.14	1.14	0.25	4.23
		20	-	-	-	-	0.51	0.49	0.11	0.81	0.7	0.69	0.15	1.57	0.89	0.89	0.19	2.79	1.14	1.14	0.25	4.24
	5	15	0.22	0.22	0.04	0.24	0.43	0.43	0.07	0.48	0.62	0.62	0.11	0.77	0.82	0.82	0.14	1.35	1.01	1.01	0.17	2.27
		17	0.22	0.22	0.04	0.24	0.43	0.43	0.07	0.48	0.62	0.62	0.11	0.78	0.82	0.82	0.14	1.36	1.01	1.01	0.17	2.28
		19	0.22	0.21	0.04	0.25	0.43	0.43	0.07	0.48	0.63	0.63	0.11	0.78	0.82	0.82	0.14	1.35	1.01	1.01	0.17	2.29
		20	-	-	-	-	0.43	0.43	0.07	0.48	0.63	0.63	0.11	0.78	0.82	0.82	0.14	1.36	1.01	1.01	0.17	2.29
	6	15	-	-	-	-	0.35	0.35	0.05	0.32	0.55	0.55	0.08	0.51	0.75	0.75	0.11	0.77	0.94	0.94	0.13	1.23
		17	-	-	-	-	0.35	0.35	0.05	0.32	0.55	0.55	0.08	0.51	0.75	0.75	0.11	0.77	0.94	0.94	0.13	1.23
		19	-	-	-	-	0.35	0.35	0.05	0.32	0.55	0.55	0.08	0.51	0.75	0.75	0.11	0.77	0.94	0.94	0.14	1.23
		20	-	-	-	-	0.35	0.35	0.05	0.32	0.55	0.55	0.08	0.51	0.75	0.75	0.11	0.77	0.94	0.94	0.14	1.24

Abbreviations:

EWT: Enter Water Temp. (°C)

ΔT: Temperature Difference (°C)

DB: Dry Bulb Temp. (°C)

WF: Water Flow (m³/h)

WB: Wet Bulb Temp. (°C)

TC: Total Cooling Capacity (kW)

SC: Sensible Cooling Capacity (kW)

WPD: Water Pressure Drop (kPa)

SF-350F3																						
EWT	ΔT	Indoor temp(W.B.)	Indoor temperature (D.B.)																			
			21				23				25				27				29			
			TC	SC	WF	WPD	TC	SC	WF	WPD	TC	SC	WF	WPD	TC	SC	WF	WPD	TC	SC	WF	WPD
°C	°C	°C	kW	kW	m³/h	kPa	kW	kW	m³/h	kPa	kW	kW	m³/h	kPa	kW	kW	m³/h	kPa	kW	kW	m³/h	kPa
5	3	15	3.26	2.41	0.93	47.9	3.24	2.74	0.93	47.32	3.26	3.06	0.93	47.87	3.4	3.4	0.97	51.73	3.71	3.71	1.06	60.78
		17	4.23	2.42	1.21	77.29	4.18	2.73	1.21	77.02	4.18	3.07	1.2	75.5	4.14	3.38	1.19	74.65	4.13	3.7	1.18	73.87
		19	5.28	2.43	1.51	116.36	5.24	2.76	1.5	115.01	5.21	3.08	1.49	113.7	5.18	3.4	1.48	112.41	5.15	3.71	1.47	111.14
		20	-	-	-	-	5.8	2.77	1.66	138.62	5.76	3.09	1.65	137.01	5.73	3.41	1.64	135.49	5.69	3.72	1.63	133.93
	4	15	2.84	2.21	0.61	22.07	2.87	2.55	0.62	22.57	3.01	2.92	0.65	24.62	3.28	3.28	0.7	28.65	3.62	3.62	0.78	34.2
		17	4	2.31	0.86	41.09	3.98	2.64	0.85	40.62	3.95	2.96	0.85	40.16	3.93	3.28	0.84	39.69	3.94	3.6	0.85	39.93
		19	5.05	2.33	1.08	62.93	5.02	2.65	1.08	62.22	4.99	2.98	1.07	61.49	4.96	3.3	1.06	60.82	4.93	3.61	1.06	60.15
		20	-	-	-	-	5.58	2.66	1.2	75.37	5.54	2.98	1.19	74.54	5.51	3.3	1.18	73.72	5.48	3.62	1.17	72.91
	5	15	1.58	1.54	0.27	5.31	1.99	1.99	0.34	7.93	2.58	2.58	0.44	12.56	3.03	3.03	0.52	16.69	3.42	3.42	0.59	20.69
		17	3.54	2.09	0.61	21.9	3.5	2.42	0.6	21.54	3.47	2.74	0.6	21.16	3.51	3.07	0.6	21.6	3.63	3.43	0.62	22.94
		19	4.82	2.22	0.83	38.26	4.79	2.54	0.82	37.81	4.76	2.87	0.82	37.39	4.73	3.19	0.81	36.97	4.7	3.5	0.81	36.55
		20	-	-	-	-	5.35	2.55	0.92	46.22	5.31	2.88	0.91	45.72	5.28	3.2	0.91	45.22	5.25	3.51	0.9	44.74
	6	15	1.45	1.44	0.21	3.04	1.7	1.7	0.24	4.36	2	2	0.29	5.82	2.52	2.52	0.36	8.72	3.09	3.09	0.44	12.42
		17	1.64	1.28	0.23	4.08	1.79	1.62	0.26	4.78	2.04	1.99	0.29	6.01	2.58	2.54	0.37	9.07	3.12	3.1	0.45	12.67
		19	4.36	2	0.62	22.87	4.31	2.31	0.62	22.4	4.28	2.64	0.61	22.15	4.24	2.96	0.61	21.79	4.2	3.27	0.6	21.43
		20	-	-	-	-	5.05	2.42	0.72	29.85	5.01	2.74	0.72	29.47	4.98	3.06	0.71	29.12	4.94	3.37	0.71	28.72
7	3	15	2.52	2.06	0.72	29.48	2.57	2.4	0.73	30.6	2.75	2.75	0.79	34.65	3.07	3.07	0.88	42.34	3.39	3.39	0.97	50.66
		17	3.51	2.08	1	54.19	3.49	2.41	1	53.53	3.47	2.73	0.99	52.9	3.45	3.05	0.99	52.49	3.51	3.38	1	53.96
		19	4.56	2.1	1.3	87.74	4.54	2.42	1.3	86.73	4.51	2.75	1.29	85.69	4.48	3.07	1.28	84.69	4.45	3.38	1.27	83.71
		20	-	-	-	-	5.09	2.43	1.45	107.36	5.06	2.76	1.45	106.25	5.03	3.07	1.44	104.89	4.99	3.39	1.43	103.68
	4	15	1.62	1.58	0.35	8.04	2.17	2.15	0.46	13.47	2.57	2.57	0.55	18.2	2.94	2.94	0.63	23.21	3.28	3.28	0.7	28.37
		17	3.22	1.95	0.69	27.38	3.2	2.28	0.69	26.99	3.18	2.6	0.68	26.67	3.23	2.94	0.69	27.43	3.35	3.28	0.72	29.48
		19	4.32	1.99	0.93	46.7	4.3	2.32	0.92	46.17	4.27	2.64	0.92	45.64	4.24	2.96	0.91	45.13	4.22	3.28	0.9	44.59
		20	-	-	-	-	4.85	2.32	1.04	57.7	4.82	2.65	1.03	57.05	4.79	2.97	1.03	56.38	4.76	3.29	1.02	55.76
	5	15	1.29	1.29	0.22	3.63	1.58	1.58	0.27	5.25	2.14	2.14	0.37	8.9	2.67	2.67	0.46	13.08	3.08	3.08	0.53	16.9
		17	1.42	1.19	0.24	4.36	1.66	1.56	0.28	5.67	2.36	2.2	0.41	10.57	2.76	2.67	0.47	13.91	3.09	3.09	0.53	17.01
		19	4.02	1.85	0.69	27.23	3.99	2.18	0.68	26.86	3.96	2.5	0.68	26.49	3.5	2.82	0.61	34.1	3.9	3.14	0.67	25.82
		20	-	-	-	-	4.6	2.21	0.79	34.73	4.57	2.53	0.78	34.32	4.54	2.86	0.78	33.94	4.51	3.18	0.77	33.56
	6	15	1.19	1.19	0.17	1.94	1.44	1.44	0.21	3.12	1.7	1.7	0.24	4.38	2.08	2.08	0.3	6.17	2.7	2.7	0.39	9.67
		17	1.26	1.1	0.18	2.26	1.46	1.43	0.21	3.2	1.71	1.71	0.24	4.37	2.09	2.09	0.3	6.19	2.7	2.7	0.39	9.72
		19	2.97	1.41	0.43	11.66	2.72	1.62	0.4	10.38	2.65	2	0.39	9.83	2.78	2.32	0.4	10.17	3.17	2.8	0.45	12.85
		20	-	-	-	-	4.12	2	0.59	20.49	4.08	2.32	0.58	20.13	4.04	2.64	0.58	19.8	4	2.95	0.57	19.43
9	3	15	1.7	1.66	0.49	14.56	2.06	2.05	0.59	20.37	2.43	2.43	0.69	27.2	2.74	2.74	0.78	34.25	3.06	3.06	0.88	41.85
		17	2.74	1.74	0.78	34.14	2.72	2.07	0.78	33.67	2.72	2.4	0.78	33.83	2.82	2.74	0.81	35.95	3.07	3.07	0.88	41.97
		19	3.8	1.75	1.09	62.17	3.77	2.08	1.08	61.39	3.75	2.41	1.07	60.66	3.72	2.73	1.07	59.94	3.7	3.05	1.06	59.16
		20	-	-	-	-	4.33	2.09	1.24	79.11	4.3	2.42	1.23	78.17	4.27	2.74	1.22	77.23	4.24	3.06	1.21	76.32
	4	15	1.15	1.15	0.25	4.44	1.7	1.7	0.37	8.77	2.2	2.2	0.47	13.74	2.59	2.59	0.56	18.46	2.95	2.95	0.64	23.32
		17	1.77	1.38	0.38	9.35	2.09	1.79	0.45	12.54	2.34	2.2	0.5	15.41	2.61	2.6	0.56	18.73	2.96	2.96	0.64	23.39
		19	3.53	1.64	0.76	32.24	3.51	1.97	0.76	31.84	3.49	2.3	0.75	31.46	3.46	2.62	0.74	31.05	3.46	2.94	0.75	31.07
		20	-	-	-	-	4.07	1.98	0.88	41.74	4.04	2.31	0.87	41.25	4.02	2.63	0.87	40.8	3.99	2.95	0.86	40.3
	5	15	1.04	1.04	0.18	2.21	1.29	1.29	0.22	3.66	1.65	1.65	0.28	5.57	2.27	2.27	0.39	9.75	2.72	2.72	0.47	13.5
		17	1.06	1	0.18	2.36	1.29	1.29	0.22	3.67	1.65	1.65	0.28	5.59	2.27	2.27	0.39	9.79	2.73	2.73	0.47	13.55
		19	2.87	1.37	0.49	14.82	2.83	1.69	0.49	14.4	2.78	2.01	0.48	13.98	2.87	2.37	0.49	14.84	3.04	2.75	0.52	16.4
		20	-	-	-	-	3.74	1.84	0.64	23.74	3.71	2.17	0.64	23.39	3.68	2.49	0.63	23.05	3.65	2.81	0.63	22.73
	6	15	0.94	0.94	0.13	1.17	1.19	1.19	0.17	1.99	1.44	1.44	0.21	3.16	1.72	1.72	0.25	4.38	2.23	2.23	0.32	6.86
		17	0.95	0.92	0.14	1.2	1.19	1.19	0.17	1.99	1.44	1.44	0.21	3.16	1.73	1.73	0.25	4.39	2.24	2.24	0.32	6.89
		19	1.17	0.74	0.17	1.92	1.29	1.08	0.18	2.43	1.47	1.41	0.21	3.3	1.73	1.73	0.25	4.4	2.25	2.25	0.32	6.93
		20	-	-	-	-	2.07	1.2	0.31	6.87	1.57	1.33	0.23	3.73	1.81	1.7	0.26	4.77	2.63	2.36	0.38	9.21

(Continued)

SF-350F3																						
EWT	ΔT	Indoor temp(W.B.)	Indoor temperature (D.B.)																			
			21				23				25				27				29			
			TC	SC	WF	WPD	TC	SC	WF	WPD	TC	SC	WF	WPD	TC	SC	WF	WPD	TC	SC	WF	WPD
°C	°C	°C	kW	kW	m^3/h	kPa	kW	kW	m^3/h	kPa	kW	kW	m^3/h	kPa	kW	kW	m^3/h	kPa	kW	kW	m^3/h	kPa
11	3	15	1.19	1.19	0.34	7.72	1.69	1.69	0.48	14.22	2.07	2.07	0.59	20.52	2.41	2.41	0.69	27.08	2.73	2.73	0.79	34.01
		17	1.69	1.31	0.49	14.26	1.85	1.69	0.53	16.84	2.08	2.07	0.6	20.82	2.41	2.41	0.69	27.16	2.73	2.73	0.79	34.11
		19	2.97	1.41	0.85	39.48	2.95	1.74	0.85	38.97	2.93	2.07	0.84	38.45	2.91	2.39	0.84	38.04	2.95	2.72	0.85	39.16
		20	-	-	-	-	3.51	1.75	1.01	53.64	3.48	2.08	1	52.97	3.46	2.4	0.99	52.31	3.43	2.72	0.99	51.59
	4	15	0.88	0.88	0.19	2.63	1.17	1.17	0.25	4.5	1.78	1.78	0.38	9.33	2.23	2.23	0.48	13.88	2.61	2.61	0.56	18.4
		17	0.88	0.88	0.19	2.63	1.18	1.18	0.25	4.52	1.78	1.78	0.38	9.37	2.23	2.23	0.48	13.92	2.61	2.61	0.56	18.46
		19	2.51	1.23	0.54	17.14	2.48	1.55	0.53	16.76	2.46	1.88	0.53	16.6	2.57	2.25	0.55	17.89	2.74	2.61	0.59	20.08
		20	-	-	-	-	3.21	1.63	0.69	26.77	3.19	1.96	0.69	26.41	3.16	2.28	0.68	26.04	3.17	2.62	0.68	26.13
	5	15	0.78	0.78	0.13	1.18	1.04	1.04	0.18	2.28	1.3	1.3	0.22	3.65	1.77	1.77	0.3	6.24	2.34	2.34	0.4	10.2
		17	0.78	0.78	0.13	1.18	1.04	1.04	0.18	2.29	1.3	1.3	0.22	3.65	1.78	1.78	0.31	6.27	2.35	2.35	0.4	10.25
		19	0.92	0.65	0.16	1.71	1.08	0.99	0.19	2.52	1.3	1.3	0.22	3.67	1.78	1.78	0.31	6.3	2.36	2.36	0.41	10.31
		20	-	-	-	-	2.19	1.34	0.39	9.48	2.04	1.65	0.36	8.24	2.3	1.94	0.4	9.92	2.64	2.37	0.45	12.6
	6	15	0.68	0.68	0.1	0.7	0.94	0.94	0.13	1.18	1.19	1.19	0.17	2.05	1.44	1.44	0.21	3.17	1.77	1.77	0.25	4.54
		17	0.69	0.69	0.1	0.7	0.94	0.94	0.13	1.18	1.19	1.19	0.17	2.06	1.45	1.45	0.21	3.18	1.78	1.78	0.26	4.56
		19	0.76	0.58	0.11	0.81	0.96	0.91	0.14	1.23	1.19	1.19	0.17	2.06	1.45	1.45	0.21	3.19	1.78	1.78	0.26	4.57
		20	-	-	-	-	1.03	0.82	0.15	1.47	1.22	1.15	0.18	2.19	1.45	1.45	0.21	3.19	1.78	1.78	0.26	4.58
13	3	15	0.73	0.73	0.21	3.22	1.25	1.25	0.36	8.28	1.7	1.7	0.49	14.23	2.08	2.08	0.59	20.27	2.4	2.4	0.69	26.57
		17	0.73	0.73	0.21	3.23	1.26	1.26	0.36	8.31	1.71	1.71	0.49	14.28	2.08	2.08	0.6	20.34	2.41	2.41	0.69	26.65
		19	2.01	1.03	0.58	19.1	1.98	1.36	0.57	18.61	2.01	1.7	0.58	19.48	2.17	2.07	0.62	22.03	2.4	2.4	0.69	26.68
		20	-	-	-	-	2.61	1.4	0.75	30.79	2.59	1.73	0.74	30.36	2.58	2.06	0.74	30.08	2.63	2.39	0.76	31.33
	4	15	0.63	0.63	0.13	1.19	0.88	0.88	0.19	2.68	1.23	1.23	0.26	4.82	1.83	1.83	0.39	9.71	2.25	2.25	0.48	13.97
		17	0.63	0.63	0.14	1.19	0.88	0.88	0.19	2.68	1.23	1.23	0.27	4.84	1.84	1.84	0.4	9.75	2.26	2.26	0.48	14.02
		19	0.69	0.56	0.15	1.45	0.89	0.88	0.19	2.71	1.23	1.23	0.27	4.85	1.84	1.84	0.4	9.77	2.26	2.26	0.49	14.08
		20	-	-	-	-	1.75	1.2	0.38	9.11	1.76	1.42	0.38	9.05	2.11	1.86	0.45	12.44	2.36	2.26	0.51	15.27
	5	15	0.53	0.53	0.09	0.62	0.78	0.78	0.13	1.19	1.04	1.04	0.18	2.33	1.31	1.31	0.23	3.65	1.89	1.89	0.33	6.9
		17	0.53	0.53	0.09	0.62	0.78	0.78	0.13	1.19	1.04	1.04	0.18	2.33	1.31	1.31	0.23	3.66	1.9	1.9	0.33	6.93
		19	0.01	0.01	0	-0.01	0.78	0.78	0.13	1.19	1.04	1.04	0.18	2.34	1.32	1.32	0.23	3.67	1.9	1.9	0.33	6.97
		20	-	-	-	-	0.82	0.73	0.14	1.32	1.04	1.04	0.18	2.35	1.32	1.32	0.23	3.67	1.9	1.9	0.33	6.98
	6	15	0.43	0.43	0.06	0.41	0.69	0.69	0.1	0.68	0.94	0.94	0.13	1.18	1.19	1.19	0.17	2.1	1.45	1.45	0.21	3.15
		17	0.43	0.43	0.06	0.41	0.69	0.69	0.1	0.68	0.94	0.94	0.13	1.19	1.19	1.19	0.17	2.1	1.45	1.45	0.21	3.16
		19	0.43	0.41	0.06	0.41	0.69	0.68	0.1	0.68	0.94	0.94	0.13	1.19	1.19	1.19	0.17	2.11	1.45	1.45	0.21	3.16
		20	-	-	-	-	0.7	0.66	0.1	0.69	0.94	0.94	0.13	1.19	1.19	1.19	0.17	2.11	1.45	1.45	0.21	3.16
15	3	15	0.47	0.47	0.14	1.2	0.73	0.73	0.21	3.22	1.3	1.3	0.37	8.71	1.72	1.72	0.49	14.34	2.07	2.07	0.6	20.17
		17	0.47	0.47	0.14	1.21	0.73	0.73	0.21	3.22	1.3	1.3	0.37	8.75	1.72	1.72	0.49	14.39	2.07	2.07	0.6	20.24
		19	0.48	0.46	0.14	1.25	0.73	0.73	0.21	3.23	1.3	1.3	0.37	8.75	1.72	1.72	0.49	14.44	2.07	2.07	0.6	20.31
		20	-	-	-	-	1.13	0.97	0.33	7.09	1.5	1.32	0.43	11.24	1.77	1.72	0.51	15.24	2.07	2.07	0.6	20.28
	4	15	0.37	0.37	0.08	0.52	0.63	0.63	0.13	1.2	0.88	0.88	0.19	2.67	1.33	1.33	0.29	5.48	1.87	1.87	0.4	9.96
		17	0.37	0.37	0.08	0.52	0.63	0.63	0.14	1.2	0.88	0.88	0.19	2.68	1.34	1.34	0.29	5.51	1.87	1.87	0.4	10
		19	0.37	0.37	0.08	0.52	0.63	0.63	0.14	1.21	0.88	0.88	0.19	2.68	1.34	1.34	0.29	5.55	1.88	1.88	0.4	10.04
		20	-	-	-	-	0.63	0.62	0.14	1.22	0.88	0.88	0.19	2.69	1.34	1.34	0.29	5.56	1.88	1.88	0.4	10.06
	5	15	0.26	0.26	0.05	0.29	0.53	0.53	0.09	0.59	0.78	0.78	0.13	1.2	1.03	1.03	0.18	2.35	1.35	1.35	0.23	3.78
		17	0.27	0.27	0.05	0.29	0.53	0.53	0.09	0.59	0.78	0.78	0.13	1.2	1.04	1.04	0.18	2.36	1.35	1.35	0.23	3.79
		19	0.26	0.26	0.05	0.29	0.53	0.53	0.09	0.6	0.78	0.78	0.13	1.2	1.04	1.04	0.18	2.37	1.35	1.35	0.23	3.8
		20	-	-	-	-	0.53	0.53	0.09	0.58	0.78	0.78	0.13	1.21	1.04	1.04	0.18	2.37	1.36	1.36	0.23	3.81
	6	15	-	-	-	-	0.43	0.43	0.06	0.39	0.68	0.68	0.1	0.66	0.94	0.94	0.13	1.2	1.19	1.19	0.17	2.14
		17	-	-	-	-	0.43	0.43	0.06	0.39	0.68	0.68	0.1	0.66	0.94	0.94	0.13	1.2	1.19	1.19	0.17	2.14
		19	-	-	-	-	0.43	0.43	0.06	0.39	0.69	0.69	0.1	0.66	0.94	0.94	0.13	1.2	1.19	1.19	0.17	2.15
		20	-	-	-	-	0.43	0.43	0.06	0.39	0.69	0.69	0.1	0.66	0.94	0.94	0.13	1.21	1.19	1.19	0.17	2.15

Abbreviations:

EWT: Enter Water Temp. (°C)

Δt: Temperature Difference (°C)

DB: Dry Bulb Temp. (°C)

WF: Water Flow (m³/h)

WB: Wet Bulb Temp. (°C)

TC: Total Cooling Capacity (kW)

SC: Sensible Cooling Capacity (kW)

WPD: Water Pressure Drop (kPa)

SF-700F3																						
EWT	ΔT	Indoor temp(W.B.)	Indoor temperature (D.B.)																			
			21				23				25				27				29			
			TC	SC	WF	WPD	TC	SC	WF	WPD	TC	SC	WF	WPD	TC	SC	WF	WPD	TC	SC	WF	WPD
°C	°C	°C	kW	kW	m³/h	kPa	kW	kW	m³/h	kPa	kW	kW	m³/h	kPa	kW	kW	m³/h	kPa	kW	kW	m³/h	kPa
5	3	15	5.2	3.92	1.49	63.39	5.17	4.48	1.48	62.69	5.25	5.05	1.5	64.65	5.6	5.6	1.61	72.95	6.15	6.15	1.76	86.52
		17	6.84	3.94	1.96	105.12	6.8	4.49	1.95	104.09	6.76	5.04	1.94	103.09	6.73	5.59	1.93	102.07	6.7	6.13	1.92	101.36
		19	8.6	3.95	2.46	161.5	8.56	4.51	2.45	159.96	8.52	5.06	2.44	158.44	8.47	5.61	2.43	156.92	8.43	6.15	2.41	155.42
		20	-	-	-	-	9.5	4.51	2.72	194.24	9.45	5.07	2.71	192.4	9.4	5.62	2.69	190.55	9.35	6.16	2.68	188.74
	4	15	4.65	3.66	1	30.44	4.7	4.24	1.01	31.04	4.95	4.84	1.06	34.14	5.41	5.41	1.16	40.17	5.96	5.96	1.28	47.81
		17	6.35	3.71	1.36	53.74	6.32	4.27	1.36	53.22	6.28	4.82	1.35	52.7	6.25	5.37	1.34	52.2	6.32	5.93	1.36	53.31
		19	8.12	3.72	1.74	84.5	8.08	4.28	1.73	83.69	8.04	4.83	1.72	82.9	8	5.38	1.72	82.12	7.95	5.93	1.71	81.36
		20	-	-	-	-	9.01	4.29	1.93	102.55	8.97	4.84	1.92	101.58	8.92	5.39	1.91	100.65	8.88	5.94	1.9	99.7
	5	15	2.04	2.04	0.35	4.81	3.37	3.37	0.58	11.49	4.38	4.38	0.75	18.11	5.08	5.08	0.87	23.9	5.72	5.72	0.98	29.55
		17	5.77	3.44	0.99	30.03	5.74	4	0.98	29.65	5.69	4.55	0.98	29.26	5.75	5.12	0.99	29.81	5.96	5.71	1.02	31.86
		19	7.62	3.49	1.31	49.71	7.58	4.05	1.3	49.25	7.54	4.61	1.29	48.81	7.5	5.15	1.29	48.38	7.46	5.7	1.28	47.88
		20	-	-	-	-	8.52	4.06	1.46	60.96	8.47	4.62	1.45	60.39	8.43	5.17	1.45	59.84	8.39	5.71	1.44	59.29
	6	15	1.86	1.86	0.27	2.64	2.21	2.21	0.32	3.98	2.68	2.68	0.38	5.59	4.34	4.34	0.62	12.97	5.22	5.22	0.75	18.03
		17	1.92	1.76	0.27	2.89	2.21	2.21	0.32	3.99	2.68	2.68	0.38	5.6	4.46	4.38	0.64	13.66	5.27	5.24	0.75	18.29
		19	7.04	3.23	1.01	30.85	7	3.79	1	30.51	6.96	4.35	1	30.18	6.92	4.9	0.99	29.85	6.87	5.44	0.98	29.49
		20	-	-	-	-	8	3.83	1.14	38.85	7.96	4.39	1.14	38.49	7.92	4.94	1.13	38.14	7.88	5.49	1.13	37.79
7	3	15	3.97	3.36	1.13	38.17	4.11	3.94	1.17	40.61	4.51	4.51	1.29	48.16	5.06	5.06	1.45	59.5	5.6	5.6	1.6	71.79
		17	5.62	3.37	1.6	72.03	5.58	3.93	1.6	71.29	5.55	4.48	1.59	70.55	5.55	5.04	1.58	70.44	5.71	5.6	1.63	74.37
		19	7.38	3.38	2.11	119.92	7.35	3.94	2.1	118.73	7.31	4.5	2.09	117.53	7.27	5.05	2.08	116.38	7.23	5.59	2.07	115.22
		20	-	-	-	-	8.28	3.95	2.37	148.5	8.24	4.5	2.35	147.05	8.2	5.06	2.34	145.59	8.15	5.6	2.33	144.22
	4	15	2.8	2.73	0.6	12.17	3.61	3.59	0.77	19.12	4.27	4.27	0.92	25.85	4.86	4.86	1.04	32.62	5.41	5.41	1.16	39.61
		17	5.09	3.14	1.09	35.45	5.06	3.7	1.08	35.08	5.04	4.25	1.08	34.85	5.17	4.83	1.11	36.45	5.45	5.41	1.17	40.24
		19	6.87	3.15	1.47	61.41	6.84	3.71	1.46	60.8	6.8	4.27	1.46	60.21	6.76	4.82	1.45	59.61	6.72	5.37	1.44	59.01
		20	-	-	-	-	7.77	3.72	1.67	77.07	7.73	4.28	1.66	76.32	7.69	4.83	1.65	75.56	7.65	5.38	1.64	74.84
	5	15	1.67	1.67	0.29	3.25	2.09	2.09	0.36	4.93	3.66	3.66	0.63	13.11	4.48	4.48	0.77	18.77	5.15	5.15	0.88	24.14
		17	1.7	1.63	0.29	3.36	3.11	2.82	0.56	10.69	4.01	3.74	0.69	15.45	4.6	4.48	0.79	19.7	5.16	5.16	0.88	24.22
		19	6.33	2.92	1.09	35.03	6.3	3.48	1.08	34.68	6.26	4.04	1.07	34.34	5.6	4.59	1.01	50.7	6.2	5.14	1.06	33.79
		20	-	-	-	-	7.24	3.49	1.24	44.75	7.2	4.05	1.23	44.32	7.16	4.61	1.23	43.9	7.12	5.15	1.22	43.48
	6	15	1.51	1.51	0.22	1.66	1.86	1.86	0.27	2.75	2.23	2.23	0.32	4.01	3.3	3.3	0.47	7.92	4.59	4.59	0.66	14.18
		17	1.52	1.5	0.22	1.68	1.86	1.86	0.27	2.75	2.23	2.23	0.32	4.02	3.32	3.32	0.48	8.01	4.6	4.6	0.66	14.23
		19	4.99	2.36	0.71	16.46	4.86	2.89	0.7	15.7	4.62	3.37	0.66	14.34	4.9	4.03	0.7	15.9	5.29	4.72	0.76	18.24
		20	-	-	-	-	6.63	3.24	0.95	27.42	6.59	3.8	0.94	27.1	6.55	4.35	0.94	26.79	6.5	4.89	0.93	26.44
9	3	15	2.82	2.76	0.81	20.37	3.38	3.38	0.97	28.54	3.95	3.95	1.13	37.66	4.51	4.51	1.29	47.83	5.05	5.05	1.45	59.04
		17	4.3	2.79	1.23	43.84	4.27	3.35	1.22	43.28	4.32	3.93	1.24	44.18	4.56	4.51	1.31	48.88	5.06	5.06	1.45	59.18
		19	6.08	2.81	1.74	83.06	6.04	3.37	1.73	82.18	6.01	3.93	1.72	81.31	5.98	4.48	1.71	80.45	5.94	5.03	1.7	79.5
		20	-	-	-	-	6.98	3.38	2	107.46	6.94	3.94	1.99	106.33	6.9	4.49	1.98	105.22	6.86	5.04	1.96	104.13
	4	15	1.5	1.5	0.32	4.07	2.89	2.89	0.62	12.75	3.67	3.67	0.79	19.55	4.3	4.3	0.93	26.09	4.86	4.86	1.05	32.55
		17	3.17	2.33	0.68	15.07	3.45	3	0.74	17.54	3.86	3.67	0.83	21.42	4.32	4.31	0.93	26.25	4.87	4.87	1.05	32.63
		19	5.53	2.58	1.19	41.1	5.49	3.14	1.18	40.66	5.46	3.7	1.18	40.23	5.43	4.26	1.17	39.76	5.46	4.82	1.18	40.27
		20	-	-	-	-	6.44	3.16	1.39	54.42	6.4	3.71	1.38	53.83	6.37	4.27	1.37	53.28	6.33	4.82	1.36	52.73
	5	15	1.32	1.32	0.23	1.89	1.68	1.68	0.29	3.31	2.49	2.49	0.43	6.6	3.82	3.82	0.66	14.1	4.56	4.56	0.78	19.31
		17	1.32	1.32	0.23	1.89	1.68	1.68	0.29	3.31	2.51	2.51	0.43	6.71	3.83	3.83	0.66	14.14	4.57	4.57	0.79	19.37
		19	4.73	2.26	0.82	20.64	4.68	2.82	0.81	20.23	4.62	3.37	0.8	19.76	4.71	3.96	0.81	20.46	4.98	4.58	0.86	22.63
		20	-	-	-	-	5.85	2.92	1.01	30.28	5.82	3.48	1	29.96	5.79	4.04	1	29.65	5.76	4.59	0.99	29.43
	6	15	1.17	1.17	0.17	0.99	1.51	1.51	0.22	1.69	1.86	1.86	0.27	2.82	2.27	2.27	0.32	4.03	3.84	3.84	0.55	10.21
		17	1.17	1.17	0.17	0.99	1.51	1.51	0.22	1.7	1.86	1.86	0.27	2.82	2.27	2.27	0.33	4.07	3.85	3.85	0.55	10.26
		19	1.29	0.99	0.18	1.19	1.53	1.49	0.22	1.74	1.87	1.87	0.27	2.82	2.27	2.27	0.33	4.08	3.86	3.86	0.55	10.32
		20	-	-	-	-	3.83	1.94	0.6	11.64	4.19	3.13	0.61	12.27	3.8	3.38	0.56	10.33	4.51	4.04	0.65	13.57

(Continued)

SF-700F3																						
EWT	ΔT	Indoor temp(W.B.)	Indoor temperature (D.B.)																			
			21				23				25				27				29			
			TC	SC	WF	WPD	TC	SC	WF	WPD	TC	SC	WF	WPD	TC	SC	WF	WPD	TC	SC	WF	WPD
°C	°C	°C	kW	kW	m^3/h	kPa	kW	kW	m^3/h	kPa	kW	kW	m^3/h	kPa	kW	kW	m^3/h	kPa	kW	kW	m^3/h	kPa
11	3	15	2.02	2.02	0.58	11.23	2.8	2.8	0.8	20.09	3.37	3.37	0.98	28.5	3.95	3.95	1.14	37.57	4.5	4.5	1.29	47.71
		17	2.76	2.17	0.79	19.51	3.01	2.8	0.87	22.87	3.4	3.4	0.98	28.61	3.95	3.95	1.14	37.66	4.51	4.51	1.3	47.83
		19	4.67	2.23	1.34	51	4.64	2.8	1.33	50.4	4.61	3.36	1.33	49.8	4.6	3.92	1.32	49.51	4.74	4.5	1.36	52.32
		20	-	-	-	-	5.58	2.81	1.6	70.91	5.55	3.37	1.6	70.11	5.51	3.92	1.59	69.33	5.48	4.47	1.57	68.47
	4	15	1.13	1.13	0.24	2.27	1.55	1.55	0.33	4.21	2.99	2.99	0.64	13.38	3.71	3.71	0.8	19.71	4.31	4.31	0.93	25.82
		17	1.13	1.13	0.24	2.27	1.55	1.55	0.33	4.22	2.99	2.99	0.64	13.43	3.72	3.72	0.8	19.77	4.31	4.31	0.93	25.89
		19	4.01	1.98	0.86	22.7	3.98	2.55	0.86	22.36	3.96	3.11	0.85	22.16	4.13	3.7	0.89	23.93	4.43	4.3	0.95	27.15
		20	-	-	-	-	4.98	2.57	1.07	33.55	4.95	3.14	1.06	33.18	4.91	3.69	1.06	32.75	4.95	4.26	1.07	33.29
	5	15	0.98	0.98	0.17	1	1.32	1.32	0.23	1.95	1.69	1.69	0.29	3.3	3.04	3.04	0.52	9.27	3.93	3.93	0.68	14.64
		17	0.98	0.98	0.17	1	1.32	1.32	0.23	1.96	1.69	1.69	0.29	3.32	3.05	3.05	0.52	9.32	3.93	3.93	0.68	14.69
		19	1.03	0.89	0.18	1.11	1.32	1.32	0.23	1.96	1.69	1.69	0.29	3.33	3.06	3.06	0.53	9.38	3.94	3.94	0.68	14.75
		20	-	-	-	-	3.47	2.07	0.61	12	3.27	2.54	0.57	10.83	3.86	3.27	0.66	14.16	4.34	3.97	0.75	17.48
	6	15	0.84	0.84	0.12	0.6	1.17	1.17	0.17	0.99	1.52	1.52	0.22	1.75	1.87	1.87	0.27	2.86	2.41	2.41	0.34	4.45
		17	0.84	0.84	0.12	0.6	1.17	1.17	0.17	0.99	1.52	1.52	0.22	1.76	1.87	1.87	0.27	2.86	2.42	2.42	0.35	4.51
		19	0.86	0.79	0.12	0.62	1.17	1.17	0.17	0.99	1.52	1.52	0.22	1.76	1.87	1.87	0.27	2.87	2.43	2.43	0.35	4.54
		20	-	-	-	-	1.2	1.13	0.17	1.03	1.52	1.52	0.22	1.76	1.87	1.87	0.27	2.87	2.43	2.43	0.35	4.55
13	3	15	0.94	0.94	0.27	2.89	2.1	2.1	0.6	11.85	2.84	2.84	0.81	20.07	3.4	3.4	0.97	28.08	3.94	3.94	1.13	36.99
		17	0.94	0.94	0.27	2.9	2.11	2.11	0.6	11.89	2.83	2.83	0.81	20.12	3.4	3.4	0.98	28.14	3.96	3.96	1.13	37.08
		19	3.13	1.66	0.9	24.21	3.09	2.21	0.89	23.66	3.19	2.8	0.91	24.99	3.47	3.39	1	29.27	3.96	3.96	1.14	37.15
		20	-	-	-	-	4.06	2.23	1.16	38.85	4.03	2.79	1.16	38.35	4.02	3.35	1.15	38.26	4.19	3.94	1.2	41.2
	4	15	0.78	0.78	0.17	0.99	1.13	1.13	0.24	2.34	2	2	0.43	6.51	3.07	3.07	0.66	13.85	3.74	3.74	0.8	19.79
		17	0.79	0.79	0.17	1	1.13	1.13	0.24	2.34	2.02	2.02	0.43	6.59	3.07	3.07	0.66	13.89	3.75	3.75	0.81	19.84
		19	0.8	0.76	0.17	1.02	1.13	1.13	0.24	2.35	2.03	2.03	0.44	6.65	3.05	3.05	0.66	13.94	3.75	3.75	0.81	19.89
		20	-	-	-	-	2.77	1.86	0.6	11.57	2.95	2.4	0.63	12.84	3.44	3.1	0.74	17.04	3.83	3.71	0.83	20.96
	5	15	0.64	0.64	0.11	0.53	0.98	0.98	0.17	0.99	1.32	1.32	0.23	2.01	1.71	1.71	0.29	3.34	3.21	3.21	0.55	10.09
		17	0.64	0.64	0.11	0.53	0.98	0.98	0.17	0.99	1.33	1.33	0.23	2.01	1.71	1.71	0.29	3.35	3.22	3.22	0.55	10.13
		19	0.64	0.64	0.11	0.53	0.98	0.98	0.17	0.99	1.33	1.33	0.23	2.01	1.71	1.71	0.29	3.35	3.23	3.23	0.56	10.17
		20	-	-	-	-	0.98	0.98	0.17	1	1.33	1.33	0.23	2.02	1.72	1.72	0.3	3.36	3.23	3.23	0.56	10.18
	6	15	0.51	0.51	0.07	0.34	0.84	0.84	0.12	0.58	1.18	1.18	0.17	0.99	1.52	1.52	0.22	1.8	1.88	1.88	0.27	2.85
		17	0.51	0.51	0.07	0.34	0.84	0.84	0.12	0.58	1.18	1.18	0.17	0.99	1.52	1.52	0.22	1.8	1.88	1.88	0.27	2.86
		19	0.51	0.5	0.07	0.34	0.84	0.84	0.12	0.58	1.18	1.18	0.17	0.99	1.52	1.52	0.22	1.81	1.88	1.88	0.27	2.86
		20	-	-	-	-	0.84	0.83	0.12	0.58	1.18	1.18	0.17	0.99	1.52	1.52	0.22	1.81	1.88	1.88	0.27	2.86
15	3	15	0.59	0.59	0.17	1	0.95	0.95	0.27	2.89	2.17	2.17	0.62	12.36	2.81	2.81	0.81	20.09	3.39	3.39	0.97	27.88
		17	0.59	0.59	0.17	1	0.95	0.95	0.27	2.9	2.17	2.17	0.62	12.42	2.8	2.8	0.82	20.14	3.4	3.4	0.98	27.95
		19	0.59	0.58	0.17	1	0.95	0.95	0.27	2.9	2.17	2.17	0.62	12.43	2.82	2.82	0.82	20.19	3.4	3.4	0.98	28.02
		20	-	-	-	-	1.84	1.55	0.53	9.39	2.44	2.19	0.7	15.31	2.88	2.84	0.83	20.74	3.39	3.38	0.98	28.04
	4	15	0.45	0.45	0.1	0.45	0.79	0.79	0.17	1	1.13	1.13	0.24	2.38	2.28	2.28	0.49	8.12	3.12	3.12	0.67	14.17
		17	0.45	0.45	0.1	0.45	0.79	0.79	0.17	1	1.13	1.13	0.24	2.38	2.29	2.29	0.49	8.16	3.12	3.12	0.67	14.21
		19	0.45	0.45	0.1	0.45	0.79	0.79	0.17	1	1.13	1.13	0.24	2.38	2.29	2.29	0.49	8.19	3.13	3.13	0.67	14.25
		20	-	-	-	-	0.79	0.79	0.17	1.01	1.13	1.13	0.24	2.38	2.3	2.3	0.49	8.21	3.14	3.14	0.67	14.27
	5	15	0.31	0.31	0.05	0.24	0.64	0.64	0.11	0.51	0.98	0.98	0.17	1	1.33	1.33	0.23	2.06	1.8	1.8	0.31	3.6
		17	0.31	0.31	0.05	0.24	0.65	0.65	0.11	0.51	0.98	0.98	0.17	1	1.33	1.33	0.23	2.06	1.8	1.8	0.31	3.61
		19	0.31	0.31	0.05	0.24	0.65	0.65	0.11	0.51	0.98	0.98	0.17	1	1.33	1.33	0.23	2.07	1.81	1.81	0.31	3.63
		20	-	-	-	-	0.65	0.65	0.11	0.51	0.98	0.98	0.17	1	1.33	1.33	0.23	2.07	1.81	1.81	0.31	3.64
	6	15	-	-	-	-	0.51	0.51	0.07	0.33	0.84	0.84	0.12	0.56	1.18	1.18	0.17	1	1.52	1.52	0.22	1.85
		17	-	-	-	-	0.51	0.51	0.07	0.33	0.84	0.84	0.12	0.56	1.18	1.18	0.17	1	1.52	1.52	0.22	1.86
		19	-	-	-	-	0.51	0.51	0.07	0.33	0.84	0.84	0.12	0.56	1.18	1.18	0.17	1	1.52	1.52	0.22	1.86
		20	-	-	-	-	0.51	0.51	0.07	0.33	0.84	0.84	0.12	0.56	1.18	1.18	0.17	1	1.52	1.52	0.22	1.86

Abbreviations:

EWT: Enter Water Temp. (°C)

Δt: Temperature Difference (°C)

DB: Dry Bulb Temp. (°C)

WF: Water Flow (m³/h)

WB: Wet Bulb Temp. (°C)

TC: Total Cooling Capacity (kW)

SC: Sensible Cooling Capacity (kW)

WPD: Water Pressure Drop (kPa)

SF-800F3																						
EWT	ΔT	Indoor temp(W.B.)	Indoor temperature (D.B.)																			
			21				23				25				27				29			
			TC	SC	WF	WPD	TC	SC	WF	WPD	TC	SC	WF	WPD	TC	SC	WF	WPD	TC	SC	WF	WPD
°C	°C	°C	kW	kW	m³/h	kPa	kW	kW	m³/h	kPa	kW	kW	m³/h	kPa	kW	kW	m³/h	kPa	kW	kW	m³/h	kPa
5	3	15	6.75	5.05	1.94	60.79	6.72	5.76	1.92	60.04	6.8	6.47	1.95	61.39	7.18	7.18	2.06	67.86	7.87	7.87	2.25	80.11
		17	8.84	5.08	2.53	99.28	8.78	5.78	2.52	98.19	8.73	6.47	2.5	97.18	8.68	7.16	2.49	96.16	8.64	7.84	2.48	95.32
		19	11.08	5.1	3.17	150.99	11.02	5.8	3.15	149.41	10.95	6.5	3.14	147.83	10.89	7.18	3.12	146.23	10.83	7.86	3.1	144.71
		20	-	-	-	-	12.2	5.81	3.49	180.67	12.13	6.51	3.47	178.8	12.06	7.2	3.45	176.93	11.99	7.88	3.43	175.1
	4	15	5.76	4.6	1.23	26.63	5.88	5.33	1.26	27.99	6.28	6.14	1.35	31.42	6.92	6.92	1.48	37.45	7.64	7.64	1.64	44.73
		17	8.28	4.81	1.78	51.77	8.23	5.52	1.77	51.23	8.14	6.14	1.75	50.34	8.14	6.9	1.75	50.16	8.2	7.6	1.76	50.89
		19	10.53	4.84	2.26	80.33	10.47	5.54	2.25	79.5	10.41	6.24	2.23	78.67	10.35	6.93	2.22	77.85	10.29	7.61	2.21	77.06
		20	-	-	-	-	11.65	5.55	2.5	96.79	11.59	6.25	2.49	95.86	11.52	6.94	2.47	94.87	11.45	7.62	2.46	93.87
	5	15	2.89	2.89	0.5	5.4	3.6	3.6	0.62	7.92	5.28	5.28	0.91	15.46	6.33	6.33	1.09	21.32	7.2	7.2	1.24	26.82
		17	7.16	4.3	1.23	26.51	7.08	4.99	1.21	26.01	7.02	5.67	1.2	25.58	7.18	6.42	1.23	26.67	7.53	7.21	1.29	29.06
		19	9.95	4.57	1.71	48.04	9.89	5.28	1.7	47.55	9.84	5.97	1.69	47.06	9.78	6.66	1.68	46.57	9.72	7.35	1.67	46.09
		20	-	-	-	-	11.08	5.29	1.9	58.48	11.02	5.99	1.89	57.89	10.96	6.68	1.88	57.31	10.9	7.37	1.87	56.74
	6	15	2.67	2.67	0.38	2.95	3.16	3.16	0.45	4.45	3.69	3.69	0.53	6	4.7	4.7	0.67	9.11	6.33	6.33	0.91	15.39
		17	2.86	2.44	0.41	3.51	3.21	3.12	0.46	4.56	3.7	3.69	0.53	6.01	4.72	4.72	0.67	9.19	6.35	6.35	0.91	15.45
		19	8.83	4.04	1.27	28.06	8.77	4.77	1.25	27.45	8.68	5.45	1.24	26.96	8.6	6.13	1.23	26.49	8.52	6.8	1.22	26
		20	-	-	-	-	10.4	4.98	1.49	37.31	10.33	5.68	1.48	36.88	10.27	6.37	1.47	36.45	10.2	7.05	1.46	36.02
7	3	15	5.18	4.32	1.48	36.89	5.34	5.06	1.52	38.9	5.79	5.78	1.65	45.15	6.48	6.48	1.85	55.46	7.17	7.17	2.05	66.63
		17	7.3	4.36	2.08	68.84	7.25	5.06	2.07	68.06	7.21	5.75	2.06	67.26	7.19	6.45	2.05	67	7.36	7.16	2.1	69.85
		19	9.54	4.37	2.73	112.9	9.49	5.08	2.71	111.66	9.43	5.78	2.69	110.44	9.37	6.47	2.68	109.24	9.32	7.15	2.66	108.08
		20	-	-	-	-	10.67	5.1	3.05	139.2	10.61	5.79	3.03	137.55	10.55	6.49	3.01	136.09	10.49	7.17	3	134.62
	4	15	2.83	2.83	0.61	7.58	4.43	4.43	0.95	16.64	5.38	5.38	1.15	23.46	6.2	6.2	1.33	30.25	6.94	6.94	1.49	37.09
		17	6.62	4.05	1.42	34.09	6.57	4.76	1.41	33.63	6.54	5.46	1.4	33.34	6.69	6.19	1.43	34.76	7.03	6.94	1.51	38.02
		19	8.95	4.11	1.92	58.95	8.9	4.82	1.91	58.32	8.85	5.52	1.9	57.7	8.75	6.18	1.89	57.44	8.74	6.9	1.87	56.45
		20	-	-	-	-	10.09	4.83	2.16	73.46	10.03	5.53	2.15	72.65	9.95	6.22	2.14	72.35	9.92	6.91	2.12	71.13
	5	15	2.39	2.39	0.41	3.62	2.91	2.91	0.5	5.39	4.12	4.12	0.71	9.86	5.52	5.52	0.95	16.47	6.45	6.45	1.11	21.77
		17	2.49	2.27	0.43	4.08	2.92	2.91	0.5	5.41	4.19	4.16	0.72	10.11	5.62	5.55	0.96	16.98	6.46	6.46	1.11	21.83
		19	8.25	3.81	1.41	33.81	8.19	4.51	1.4	33.38	8.14	5.21	1.39	32.95	7.35	5.9	1.28	44.1	8.04	6.59	1.38	32.25
		20	-	-	-	-	9.47	4.56	1.62	43.39	9.41	5.27	1.61	42.94	9.36	5.96	1.61	42.49	9.3	6.65	1.6	42.02
	6	15	2.18	2.18	0.31	1.9	2.67	2.67	0.38	3.06	3.17	3.17	0.45	4.51	3.79	3.79	0.54	6.19	5.4	5.4	0.77	11.51
		17	2.23	2.11	0.32	1.99	2.67	2.67	0.38	3.06	3.17	3.17	0.45	4.52	3.8	3.8	0.54	6.21	5.42	5.42	0.78	11.57
		19	5.5	2.59	0.86	13.71	5.7	3.74	0.87	14.07	4.94	3.79	0.79	11.99	3.81	3.8	0.55	6.26	6.03	5.63	0.86	13.97
		20	-	-	-	-	8.31	4.07	1.19	24.69	8.23	4.76	1.18	24.23	8.14	5.44	1.17	23.77	8.05	6.12	1.15	23.3
9	3	15	3.49	3.44	1	17.97	4.32	4.32	1.24	26.43	5.1	5.1	1.46	35.42	5.79	5.79	1.66	44.74	6.47	6.47	1.85	54.92
		17	5.63	3.62	1.61	42.54	5.6	4.34	1.6	41.98	5.63	5.05	1.61	42.57	5.89	5.78	1.69	46.24	6.48	6.48	1.86	55.08
		19	7.89	3.65	2.26	79.1	7.84	4.35	2.25	78.2	7.8	5.06	2.23	77.31	7.75	5.75	2.22	76.42	7.7	6.44	2.2	75.48
		20	-	-	-	-	9.03	4.37	2.59	101.52	8.98	5.07	2.57	100.38	8.92	5.77	2.55	99.26	8.87	6.45	2.54	98.14
	4	15	2.13	2.13	0.46	4.58	3.35	3.35	0.72	10.06	4.57	4.57	0.98	17.46	5.44	5.44	1.17	23.93	6.23	6.23	1.34	30.44
		17	3.6	3.14	0.79	11.85	3.89	3.56	0.84	13.15	4.78	4.59	1.03	18.91	5.5	5.49	1.18	24.07	6.24	6.24	1.34	30.53
		19	7.25	3.38	1.56	40.04	7.2	4.09	1.55	39.59	7.16	4.79	1.54	39.14	7.11	5.49	1.53	38.74	7.14	6.19	1.54	38.97
		20	-	-	-	-	8.4	4.11	1.81	52.44	8.35	4.81	1.8	51.86	8.3	5.51	1.79	51.27	8.25	6.2	1.78	50.71
	5	15	1.9	1.9	0.33	2.14	2.4	2.4	0.41	3.73	2.98	2.98	0.51	5.55	4.6	4.6	0.79	11.86	5.68	5.68	0.98	17.23
		17	1.91	1.9	0.33	2.15	2.4	2.4	0.41	3.74	2.98	2.98	0.51	5.56	4.61	4.61	0.79	11.91	5.69	5.69	0.98	17.29
		19	5.05	2.54	0.87	13.99	5.05	3.33	0.87	13.99	4.73	3.84	0.81	12.42	5.65	4.86	0.97	17.08	6.19	5.73	1.07	20.11
		20	-	-	-	-	7.63	3.79	1.31	29.21	7.57	4.49	1.3	28.8	7.51	5.19	1.29	28.38	7.47	5.89	1.28	28.03
	6	15	1.7	1.7	0.24	1.17	2.18	2.18	0.31	1.92	2.67	2.67	0.38	3.14	3.18	3.18	0.46	4.5	4.09	4.09	0.59	6.96
		17	1.7	1.7	0.24	1.17	2.19	2.19	0.31	1.93	2.67	2.67	0.38	3.15	3.18	3.18	0.46	4.51	4.11	4.11	0.59	7.04
		19	1.97	1.38	0.28	1.53	2.26	2.08	0.32	2.08	2.68	2.67	0.38	3.16	3.19	3.19	0.46	4.52	4.12	4.12	0.59	7.05
		20	-	-	-	-	2.46	1.87	0.35	2.58	4.6	3.54	0.77	11.01	3.2	3.18	0.46	4.54	4.12	4.12	0.59	7.06

(Continued)

SF-800F3																						
EWT	ΔT	Indoor temp(W.B.)	Indoor temperature (D.B.)																			
			21				23				25				27				29			
			TC	SC	WF	WPD	TC	SC	WF	WPD	TC	SC	WF	WPD	TC	SC	WF	WPD	TC	SC	WF	WPD
°C	°C	°C	kW	kW	m³/h	kPa	kW	kW	m³/h	kPa	kW	kW	m³/h	kPa	kW	kW	m³/h	kPa	kW	kW	m³/h	kPa
11	3	15	2.28	2.28	0.66	8.44	3.52	3.52	1.01	18.18	4.35	4.35	1.25	26.69	5.08	5.08	1.46	35.28	5.77	5.77	1.66	44.51
		17	3.25	2.65	0.93	15.76	3.79	3.53	1.09	20.74	4.37	4.36	1.26	26.87	5.09	5.09	1.46	35.37	5.78	5.78	1.66	44.63
		19	6.11	2.91	1.76	49.36	6.07	3.62	1.74	48.73	6.03	4.33	1.73	48.13	6	5.03	1.73	47.77	6.15	5.75	1.77	49.9
		20	-	-	-	-	7.26	3.64	2.09	67.85	7.22	4.35	2.08	67.04	7.17	5.04	2.06	66.24	7.12	5.74	2.05	65.37
	4	15	1.62	1.62	0.35	2.54	2.14	2.14	0.46	4.56	3.62	3.62	0.78	11.39	4.65	4.65	1	17.79	5.49	5.49	1.18	23.94
		17	1.62	1.62	0.35	2.54	2.14	2.14	0.46	4.57	3.63	3.63	0.78	11.44	4.66	4.66	1	17.85	5.5	5.5	1.18	24.01
		19	4.96	2.47	1.07	19.95	4.88	3.17	1.05	19.36	4.91	3.89	1.06	19.57	5.25	4.7	1.13	22.05	5.69	5.5	1.22	25.55
		20	-	-	-	-	6.55	3.36	1.41	32.93	6.51	4.07	1.4	32.53	6.46	4.77	1.39	32.09	6.5	5.48	1.4	32.47
	5	15	1.42	1.42	0.25	1.17	1.91	1.91	0.33	2.2	2.4	2.4	0.41	3.76	3.18	3.18	0.55	6.15	4.83	4.83	0.83	12.77
		17	1.42	1.42	0.25	1.17	1.91	1.91	0.33	2.2	2.4	2.4	0.41	3.76	3.19	3.19	0.55	6.18	4.84	4.84	0.83	12.82
		19	1.57	1.24	0.27	1.41	1.92	1.88	0.33	2.25	2.4	2.4	0.41	3.77	3.2	3.2	0.55	6.22	4.85	4.84	0.83	12.85
		20	-	-	-	-	4.07	2.37	0.8	11.74	2.43	2.37	0.42	3.84	3.22	3.21	0.55	6.25	5.26	4.91	0.91	14.88
	6	15	1.23	1.23	0.18	0.74	1.71	1.71	0.24	1.17	2.19	2.19	0.31	1.98	2.67	2.67	0.38	3.22	3.23	3.23	0.46	4.57
		17	1.23	1.23	0.18	0.74	1.71	1.71	0.25	1.17	2.19	2.19	0.31	1.98	2.68	2.68	0.38	3.23	3.23	3.23	0.46	4.58
		19	1.3	1.11	0.19	0.78	1.71	1.71	0.25	1.17	2.19	2.19	0.31	1.99	2.68	2.68	0.38	3.24	3.23	3.23	0.46	4.59
		20	-	-	-	-	1.79	1.58	0.26	1.27	2.19	2.18	0.32	2	2.68	2.68	0.38	3.24	3.24	3.24	0.46	4.59
13	3	15	1.35	1.35	0.39	3.3	2.53	2.53	0.72	9.94	3.57	3.57	1.02	18.32	4.36	4.36	1.25	26.39	5.07	5.07	1.45	34.65
		17	1.35	1.35	0.39	3.3	2.53	2.53	0.73	9.99	3.56	3.56	1.02	18.39	4.37	4.37	1.25	26.47	5.08	5.08	1.46	34.75
		19	4.04	2.12	1.16	22.97	3.98	2.82	1.14	22.31	4.14	3.59	1.19	23.97	4.51	4.36	1.29	27.99	5.08	5.08	1.46	34.8
		20	-	-	-	-	5.34	2.9	1.53	38.02	5.29	3.6	1.52	37.48	5.29	4.32	1.52	37.34	5.45	5.05	1.56	39.58
	4	15	1.14	1.14	0.25	1.16	1.63	1.63	0.35	2.63	2.19	2.19	0.47	4.69	3.78	3.78	0.81	12.15	4.72	4.72	1.01	18.04
		17	1.14	1.14	0.25	1.17	1.63	1.63	0.35	2.63	2.2	2.2	0.47	4.7	3.79	3.79	0.81	12.19	4.73	4.73	1.02	18.1
		19	1.19	1.07	0.26	1.25	1.63	1.62	0.35	2.63	2.2	2.2	0.47	4.71	3.79	3.78	0.82	12.22	4.74	4.74	1.02	18.16
		20	-	-	-	-	1.69	1.55	0.36	2.87	2.2	2.2	0.47	4.71	4.2	3.85	0.9	14.65	4.88	4.74	1.05	19.19
	5	15	0.95	0.95	0.16	0.65	1.42	1.42	0.25	1.16	1.91	1.91	0.33	2.25	2.41	2.41	0.41	3.73	3.71	3.71	0.64	7.89
		17	0.95	0.95	0.16	0.65	1.43	1.43	0.25	1.16	1.91	1.91	0.33	2.25	2.41	2.41	0.41	3.74	3.72	3.72	0.64	7.94
		19	0.96	0.92	0.17	0.66	1.43	1.43	0.25	1.16	1.91	1.91	0.33	2.26	2.41	2.41	0.42	3.75	3.73	3.73	0.64	8
		20	-	-	-	-	1.44	1.39	0.25	1.19	1.91	1.91	0.33	2.26	2.42	2.42	0.42	3.75	3.74	3.74	0.64	8.03
	6	15	0.76	0.76	0.11	0.43	1.23	1.23	0.18	0.7	1.71	1.71	0.24	1.16	2.19	2.19	0.31	2.02	2.68	2.68	0.38	3.23
		17	0.76	0.76	0.11	0.43	1.23	1.23	0.18	0.7	1.71	1.71	0.24	1.16	2.19	2.19	0.31	2.03	2.68	2.68	0.38	3.24
		19	0.76	0.76	0.11	0.43	1.23	1.23	0.18	0.7	1.71	1.71	0.24	1.16	2.19	2.19	0.31	2.03	2.68	2.68	0.38	3.24
		20	-	-	-	-	1.24	1.23	0.18	0.7	1.71	1.71	0.25	1.16	2.19	2.19	0.31	2.03	2.68	2.68	0.38	3.25
15	3	15	0.86	0.86	0.25	1.17	1.35	1.35	0.39	3.3	2.66	2.66	0.76	10.81	3.6	3.6	1.04	18.55	4.35	4.35	1.25	26.25
		17	0.86	0.86	0.25	1.17	1.35	1.35	0.39	3.3	2.67	2.67	0.77	10.84	3.64	3.64	1.04	18.6	4.37	4.37	1.26	26.33
		19	0.85	0.84	0.25	1.16	1.35	1.35	0.39	3.31	2.67	2.67	0.77	10.89	3.61	3.61	1.04	18.67	4.38	4.38	1.26	26.4
		20	-	-	-	-	1.35	1.35	0.39	3.31	2.96	2.72	0.85	13.02	3.68	3.61	1.06	19.31	4.36	4.35	1.26	26.4
	4	15	0.67	0.67	0.14	0.55	1.14	1.14	0.25	1.17	1.63	1.63	0.35	2.69	2.38	2.38	0.51	5.34	3.89	3.89	0.84	12.63
		17	0.67	0.67	0.14	0.55	1.14	1.14	0.25	1.17	1.63	1.63	0.35	2.7	2.39	2.39	0.52	5.38	3.89	3.89	0.84	12.69
		19	0.67	0.66	0.14	0.55	1.14	1.14	0.25	1.16	1.63	1.63	0.35	2.7	2.4	2.4	0.52	5.42	3.9	3.9	0.84	12.73
		20	-	-	-	-	1.14	1.13	0.25	1.16	1.63	1.63	0.35	2.7	2.41	2.41	0.52	5.44	3.9	3.9	0.84	12.75
	5	15	0.47	0.47	0.08	0.3	0.95	0.95	0.16	0.62	1.43	1.43	0.24	1.12	1.91	1.91	0.33	2.31	2.44	2.44	0.42	3.76
		17	0.47	0.47	0.08	0.3	0.95	0.95	0.16	0.62	1.43	1.43	0.25	1.16	1.91	1.91	0.33	2.32	2.44	2.44	0.42	3.76
		19	0.47	0.47	0.08	0.3	0.95	0.95	0.16	0.62	1.43	1.43	0.25	1.16	1.91	1.91	0.33	2.32	2.44	2.44	0.42	3.77
		20	-	-	-	-	0.95	0.95	0.16	0.62	1.43	1.43	0.25	1.17	1.91	1.91	0.33	2.33	2.45	2.45	0.42	3.78
	6	15	-	-	-	-	0.76	0.76	0.11	0.4	1.23	1.23	0.18	0.68	1.71	1.71	0.24	1.16	2.19	2.19	0.31	2.08
		17	-	-	-	-	0.76	0.76	0.11	0.4	1.23	1.23	0.18	0.68	1.71	1.71	0.24	1.16	2.19	2.19	0.31	2.08
		19	-	-	-	-	0.76	0.76	0.11	0.4	1.23	1.23	0.18	0.68	1.71	1.71	0.25	1.16	2.19	2.19	0.31	2.09
		20	-	-	-	-	0.76	0.76	0.11	0.4	1.24	1.24	0.18	0.67	1.71	1.71	0.25	1.16	2.19	2.19	0.31	2.09

Abbreviations:

EWT: Enter Water Temp. (°C)

ΔT: Temperature Difference (°C)

DB: Dry Bulb Temp. (°C)

WF: Water Flow (m³/h)

WB: Wet Bulb Temp. (°C)

TC: Total Cooling Capacity (kW)

SC: Sensible Cooling Capacity (kW)

WPD: Water Pressure Drop (kPa)

Heating Capacity Table

SF-250F3													
EWT	ΔT	Indoor temperature (D.B.)											
		16			18			20			22		
		TH	WF	WPD	TH	WF	WPD	TH	WF	WPD	TH	WF	WPD
[°C]	[°C]	[kW]	[m³/h]	[kPa]	[kW]	[m³/h]	[kPa]	[kW]	[m³/h]	[kPa]	[kW]	[m³/h]	[kPa]
40	5	2.71	0.47	12.54	2.45	0.42	10.44	2.19	0.38	8.52	1.92	0.33	6.71
	8	2.38	0.26	4.31	2.01	0.22	3.19	1.55	0.17	2.02	1.24	0.13	1.37
	10	1.75	0.15	1.7	1.5	0.13	1.3	1.29	0.11	0.94	1.08	0.09	0.61
	12	1.55	0.11	0.94	1.34	0.1	0.66	1.14	0.08	0.46	0.93	0.07	0.33
	15	1.32	0.08	0.41	1.11	0.06	0.32	0.9	0.05	0.26	0.67	0.04	0.2
45	5	3.34	0.58	18.19	3.08	0.53	15.65	2.6	0.47	14.3	2.57	0.44	11.17
	8	3.15	0.34	7	2.89	0.31	5.91	2.59	0.28	4.86	2.27	0.24	3.86
	10	2.9	0.25	4.02	2.54	0.22	3.19	2.11	0.18	2.3	1.66	0.14	1.51
	12	2.27	0.16	1.92	1.9	0.14	1.41	1.66	0.12	1.1	1.45	0.1	0.82
	15	1.84	0.11	0.85	1.63	0.09	0.64	1.43	0.08	0.47	1.22	0.07	0.35
50	5	3.98	0.68	24.85	3.71	0.64	21.84	3.45	0.59	19.06	3.19	0.55	16.49
	8	3.82	0.41	9.68	3.55	0.38	8.49	3.29	0.35	7.37	3.02	0.33	6.34
	10	3.69	0.32	6.09	3.4	0.29	5.26	3.1	0.27	4.46	2.79	0.24	3.69
	12	3.44	0.25	3.88	3.1	0.22	3.22	2.72	0.19	2.56	2.25	0.16	1.84
	15	2.53	0.15	1.54	2.19	0.13	1.2	1.95	0.11	0.97	1.73	0.1	0.76
55	5	4.6	0.79	32.49	4.34	0.75	29.01	4.07	0.7	25.77	3.81	0.66	22.75
	8	4.46	0.48	12.72	4.19	0.45	11.34	3.92	0.42	10.05	3.66	0.39	8.85
	10	4.34	0.37	8.07	4.07	0.35	7.18	3.81	0.33	6.35	3.54	0.3	5.56
	12	4.22	0.3	5.51	3.93	0.28	4.85	3.64	0.26	4.21	3.33	0.24	3.6
	15	3.82	0.22	3.11	3.45	0.2	2.6	3.03	0.17	2.07	2.52	0.14	1.5
60	5	5.24	0.9	41.16	4.97	0.85	37.21	4.7	0.81	33.5	4.44	0.76	30.03
	8	5.09	0.55	16.13	4.82	0.52	14.57	4.55	0.49	13.11	4.29	0.46	11.73
	10	4.99	0.43	10.28	4.72	0.41	9.27	4.45	0.38	8.33	4.18	0.36	7.44
	12	4.87	0.35	7.07	4.6	0.33	6.37	4.33	0.31	5.7	4.06	0.29	5.07
	15	4.66	0.27	4.37	4.36	0.25	3.88	4.06	0.23	3.39	3.72	0.21	2.92
65	5	5.88	1.01	50.5	5.6	0.96	46.1	5.33	0.91	41.95	5.06	0.87	38.03
	8	5.73	0.61	19.87	5.46	0.59	18.12	5.19	0.56	16.48	4.92	0.53	14.93
	10	5.64	0.48	12.7	5.36	0.46	11.57	5.09	0.44	10.51	4.82	0.41	9.51
	12	5.52	0.4	8.76	5.25	0.38	7.98	4.98	0.36	7.24	4.71	0.34	6.54
	15	5.35	0.31	5.51	5.07	0.29	5.01	4.79	0.27	4.52	4.51	0.26	4.06

Abbreviations:

Δt: Temperature Difference (°C) **TH:** Total Heating Capacity (kW) **WF:** Water Flow (m³/h) **WPD:** Water Pressure Drop (kPa)

SF-350F3													
EWT	ΔT	Indoor temperature (D.B.)											
		16			18			20			22		
		TH	WF	WPD	TH	WF	WPD	TH	WF	WPD	TH	WF	WPD
[°C]	[°C]	[kW]	[m ³ /h]	[kPa]	[kW]	[m ³ /h]	[kPa]	[kW]	[m ³ /h]	[kPa]	[kW]	[m ³ /h]	[kPa]
40	5	3.83	0.66	28.67	3.47	0.6	23.79	3.1	0.54	19.39	2.75	0.47	15.44
	8	3.57	0.39	10.69	3.16	0.34	8.6	2.72	0.29	6.56	2.19	0.24	4.48
	10	3.15	0.27	5.76	2.54	0.22	3.92	1.73	0.15	2.02	1.41	0.12	1.39
	12	2.07	0.15	2.02	1.75	0.13	1.48	1.47	0.11	0.99	1.2	0.09	0.62
	15	1.71	0.1	0.82	1.43	0.08	0.57	1.15	0.07	0.41	0.86	0.05	0.3
45	5	4.74	0.82	41.97	4.36	0.75	36.01	3.5	0.68	35.1	3.64	0.63	25.58
	8	4.49	0.48	15.91	4.11	0.44	13.57	3.74	0.4	11.41	3.37	0.36	9.44
	10	4.29	0.37	9.83	3.9	0.34	8.25	3.47	0.3	6.7	3	0.26	5.16
	12	3.96	0.28	6.15	3.45	0.25	4.82	2.8	0.2	3.34	1.96	0.14	1.79
	15	2.48	0.14	1.85	2.13	0.12	1.4	1.85	0.11	1.03	1.57	0.09	0.7
50	5	5.64	0.97	57.74	5.26	0.91	50.69	4.89	0.84	44.14	4.52	0.78	38.09
	8	5.4	0.58	22.11	5.02	0.54	19.33	4.65	0.5	16.76	4.28	0.46	14.39
	10	5.22	0.45	13.82	4.85	0.42	12.05	4.47	0.39	10.4	4.09	0.35	8.87
	12	5.03	0.36	9.3	4.65	0.33	8.04	4.24	0.3	6.81	3.8	0.27	5.59
	15	4.53	0.26	5.17	3.99	0.23	4.13	3.31	0.19	2.97	2.39	0.14	1.69
55	5	6.53	1.13	75.99	6.16	1.06	67.81	5.79	1	60.17	5.41	0.93	53.03
	8	6.31	0.68	29.24	5.93	0.64	26.03	5.55	0.6	23.03	5.17	0.56	20.24
	10	6.14	0.53	18.4	5.76	0.5	16.34	5.38	0.46	14.42	5	0.43	12.63
	12	5.97	0.43	12.49	5.58	0.4	11.06	5.2	0.37	9.73	4.82	0.35	8.48
	15	5.67	0.33	7.62	5.27	0.3	6.67	4.84	0.28	5.73	4.39	0.25	4.8
60	5	7.44	1.28	96.79	7.06	1.21	87.43	6.67	1.15	78.66	6.3	1.08	70.43
	8	7.22	0.78	37.39	6.83	0.73	33.71	6.45	0.69	30.26	6.08	0.65	27.04
	10	7.05	0.61	23.59	6.67	0.57	21.25	6.29	0.54	19.05	5.92	0.51	16.99
	12	6.89	0.49	16.1	6.5	0.47	14.48	6.12	0.44	12.95	5.74	0.41	11.51
	15	6.62	0.38	9.95	6.23	0.36	8.92	5.85	0.34	7.94	5.46	0.31	7.02
65	5	8.35	1.43	119.29	7.96	1.36	108.82	7.57	1.3	98.94	7.19	1.23	89.64
	8	8.12	0.87	46.27	7.74	0.83	42.19	7.35	0.79	38.31	6.97	0.75	34.65
	10	7.97	0.68	29.33	7.59	0.65	26.7	7.2	0.62	24.23	6.82	0.59	21.89
	12	7.81	0.56	20.09	7.42	0.53	18.26	7.04	0.5	16.54	6.66	0.48	14.92
	15	7.55	0.43	12.51	7.16	0.41	11.35	6.78	0.39	10.25	6.39	0.37	9.21

Abbreviations:

Δt : Temperature Difference (°C) **TH:** Total Heating Capacity (kW) **WF:** Water Flow (m³/h) **WPD:** Water Pressure Drop (kPa)

SF-700F3													
EWT	ΔT	Indoor temperature (D.B.)											
		16			18			20			22		
		TH	WF	WPD	TH	WF	WPD	TH	WF	WPD	TH	WF	WPD
[°C]	[°C]	[kW]	[m ³ /h]	[kPa]	[kW]	[m ³ /h]	[kPa]	[kW]	[m ³ /h]	[kPa]	[kW]	[m ³ /h]	[kPa]
40	5	6.44	1.11	41.37	5.83	1	34.14	5.19	0.89	27.62	4.58	0.79	21.82
	8	5.89	0.63	14.78	5.25	0.57	12	4.58	0.49	9.38	3.77	0.41	6.62
	10	5.34	0.46	8.31	4.43	0.38	5.95	2.29	0.2	1.88	1.83	0.16	1.23
	12	2.73	0.2	1.86	2.27	0.16	1.32	1.9	0.14	0.85	1.52	0.11	0.53
	15	2.18	0.13	0.7	1.81	0.1	0.49	1.44	0.08	0.36	1.05	0.06	0.26
45	5	7.95	1.38	61.58	7.37	1.27	52.69	6	1.14	55.5	6.11	1.05	37.06
	8	7.46	0.8	22.45	6.83	0.73	19.03	6.19	0.67	15.91	5.56	0.6	13.06
	10	7.07	0.61	13.54	6.43	0.55	11.39	5.81	0.5	9.39	5.08	0.44	7.42
	12	6.65	0.48	8.69	5.85	0.42	6.95	4.9	0.35	5.07	2.58	0.19	1.65
	15	3.26	0.19	1.69	2.77	0.16	1.25	2.38	0.14	0.88	2	0.12	0.59
50	5	9.56	1.65	85.79	8.93	1.54	75.16	8.29	1.43	65.31	7.59	1.32	56.21
	8	9.03	0.97	31.76	8.38	0.9	27.69	7.76	0.84	23.9	7.12	0.77	20.39
	10	8.65	0.75	19.43	8	0.69	16.84	7.39	0.64	14.46	6.75	0.58	12.26
	12	8.28	0.59	12.8	7.64	0.55	11.04	6.99	0.5	9.4	6.34	0.45	7.85
	15	7.57	0.43	7.3	6.76	0.39	5.95	5.77	0.33	4.49	3.17	0.18	1.57
55	5	11.13	1.92	114	10.48	1.8	101.63	9.83	1.69	90.04	9.18	1.58	79.23
	8	10.62	1.14	42.6	9.97	1.07	37.86	9.33	1	33.41	8.68	0.94	29.23
	10	10.24	0.88	26.29	9.61	0.83	23.28	8.96	0.77	20.46	8.31	0.72	17.84
	12	9.85	0.71	17.52	9.23	0.66	15.45	8.59	0.62	13.52	7.95	0.57	11.73
	15	9.29	0.53	10.42	8.64	0.5	9.12	7.98	0.46	7.9	7.3	0.42	6.72
60	5	12.7	2.18	146.31	12.05	2.07	132.15	11.4	1.96	118.78	10.76	1.85	106.24
	8	12.19	1.31	55.03	11.54	1.24	49.57	10.89	1.17	44.45	10.25	1.1	39.63
	10	11.84	1.02	34.16	11.19	0.96	30.7	10.54	0.91	27.45	9.88	0.85	24.4
	12	11.48	0.82	22.92	10.82	0.78	20.55	10.16	0.73	18.32	9.5	0.68	16.23
	15	10.91	0.63	13.83	10.24	0.59	12.34	9.61	0.55	10.94	8.96	0.51	9.62
65	5	14.28	2.44	181.42	13.62	2.33	165.54	12.96	2.22	150.48	12.31	2.11	136.27
	8	13.77	1.48	68.75	13.12	1.41	62.61	12.47	1.34	56.8	11.82	1.27	51.29
	10	13.43	1.15	42.89	12.77	1.1	39	12.12	1.04	35.32	11.48	0.99	31.85
	12	13.08	0.94	28.95	12.42	0.89	26.28	11.77	0.84	23.75	11.12	0.8	21.36
	15	12.52	0.72	17.64	11.87	0.68	15.96	11.22	0.64	14.36	10.56	0.61	12.86

Abbreviations:

Δt : Temperature Difference (°C) **TH:** Total Heating Capacity (kW) **WF:** Water Flow (m³/h) **WPD:** Water Pressure Drop (kPa)


SF-800F3													
EWT	ΔT	Indoor temperature (D.B.)											
		16			18			20			22		
		TH	WF	WPD	TH	WF	WPD	TH	WF	WPD	TH	WF	WPD
[°C]	[°C]	[kW]	[m ³ /h]	[kPa]	[kW]	[m ³ /h]	[kPa]	[kW]	[m ³ /h]	[kPa]	[kW]	[m ³ /h]	[kPa]
40	5	8.37	1.44	39.32	7.57	1.3	32.57	6.77	1.16	26.48	5.96	1.03	21.02
	8	7.73	0.83	14.46	6.89	0.74	11.72	5.93	0.64	8.97	4.8	0.52	6.15
	10	6.88	0.59	7.87	5.55	0.48	5.38	3.36	0.29	2.24	2.73	0.24	1.52
	12	4.02	0.29	2.24	3.39	0.24	1.62	2.85	0.2	1.06	2.3	0.17	0.67
	15	3.29	0.19	0.88	2.74	0.16	0.62	2.19	0.13	0.45	1.62	0.09	0.33
45	5	10.34	1.78	57.92	9.54	1.64	49.64	8.05	1.4	46.9	7.91	1.37	35.16
	8	9.75	1.05	21.65	8.93	0.96	18.42	8.11	0.87	15.46	7.3	0.79	12.76
	10	9.29	0.8	13.27	8.47	0.73	11.18	7.57	0.65	9.13	6.56	0.56	7.05
	12	8.63	0.62	8.38	7.53	0.54	6.57	6.13	0.44	4.57	3.79	0.27	1.97
	15	4.8	0.28	2.04	4.13	0.24	1.54	3.57	0.21	1.1	3.02	0.17	0.74
50	5	12.34	2.12	80.07	11.51	1.98	70.23	10.69	1.84	61.11	9.87	1.7	52.68
	8	11.74	1.27	30.29	10.93	1.18	26.44	10.11	1.09	22.89	9.3	1	19.62
	10	11.34	0.98	18.78	10.51	0.91	16.34	9.69	0.83	14.08	8.87	0.76	11.98
	12	10.9	0.78	12.55	10.05	0.72	10.85	9.21	0.66	9.23	8.28	0.59	7.62
	15	9.86	0.57	7.03	8.71	0.5	5.63	7.22	0.41	4.05	4.61	0.26	1.85
55	5	14.33	2.47	105.75	13.5	2.32	94.32	12.67	2.18	83.65	11.84	2.04	73.67
	8	13.76	1.48	40.26	12.93	1.39	35.81	12.1	1.3	31.65	11.26	1.21	27.77
	10	13.36	1.15	25.15	12.53	1.08	22.31	11.69	1.01	19.67	10.88	0.94	17.2
	12	12.94	0.93	16.96	12.1	0.87	15	11.26	0.81	13.17	10.45	0.75	11.46
	15	12.26	0.7	10.26	11.41	0.65	8.99	10.5	0.6	7.76	9.55	0.55	6.53
60	5	16.32	2.81	135.07	15.46	2.66	122	14.63	2.52	109.7	13.82	2.38	98.2
	8	15.77	1.7	51.68	14.93	1.61	46.57	14.09	1.52	41.78	13.27	1.43	37.29
	10	15.38	1.32	32.41	14.54	1.25	29.17	13.71	1.18	26.13	12.88	1.11	23.28
	12	14.98	1.07	21.99	14.14	1.01	19.75	13.3	0.95	17.64	12.47	0.89	15.66
	15	14.34	0.82	13.47	13.49	0.77	12.05	12.65	0.73	10.71	11.81	0.68	9.45
65	5	18.32	3.14	166.83	17.47	2.99	152.19	16.63	2.85	138.36	15.78	2.7	125.34
	8	17.78	1.91	64.15	16.93	1.82	58.49	16.09	1.73	53.1	15.25	1.64	47.99
	10	17.41	1.49	40.44	16.56	1.42	36.81	15.71	1.35	33.37	14.88	1.28	30.12
	12	17.01	1.22	27.55	16.16	1.16	25.04	15.32	1.1	22.66	14.49	1.04	20.41
	15	16.39	0.94	17.02	15.54	0.89	15.43	14.7	0.84	13.92	13.86	0.79	12.49

Abbreviations:

Δt : Temperature Difference (°C) **TH:** Total Heating Capacity (kW) **WF:** Water Flow (m³/h) **WPD:** Water Pressure Drop (kPa)

8. Dimensions


Cased type

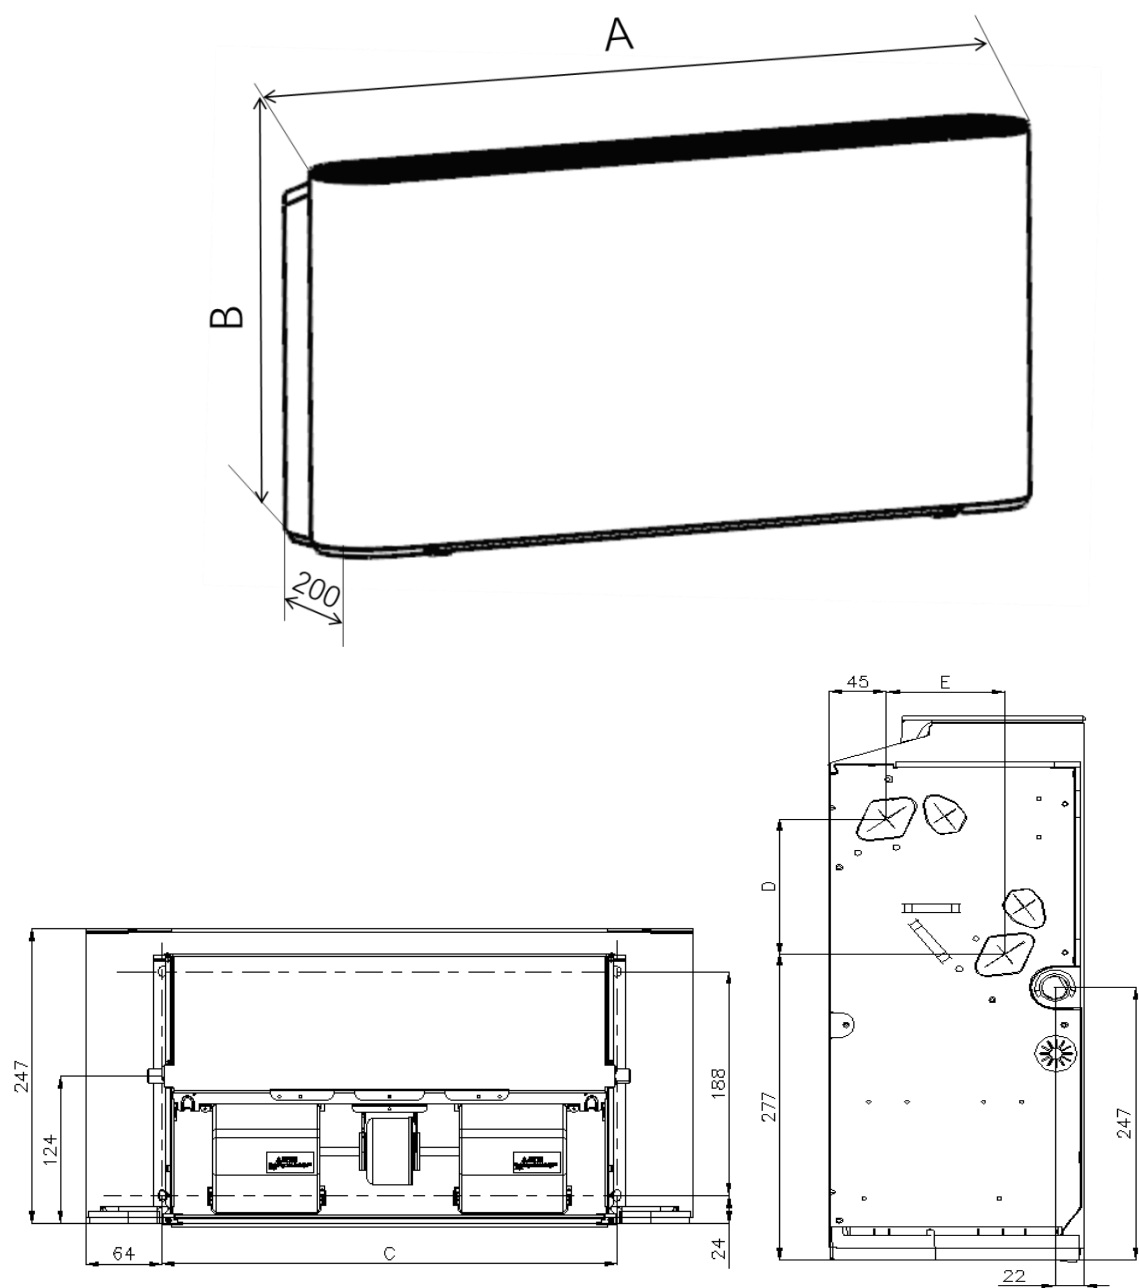

Dimensions (unit: mm)

MODEL	SF-250F3	SF-350F3	SF-700F3	SF-800F3
A	1020	1240	1360	1360
B	495	495	495	591
C	793	973	1093	1093
D	123	123	123	219
E	93	93	93	102





9. Sound Levels

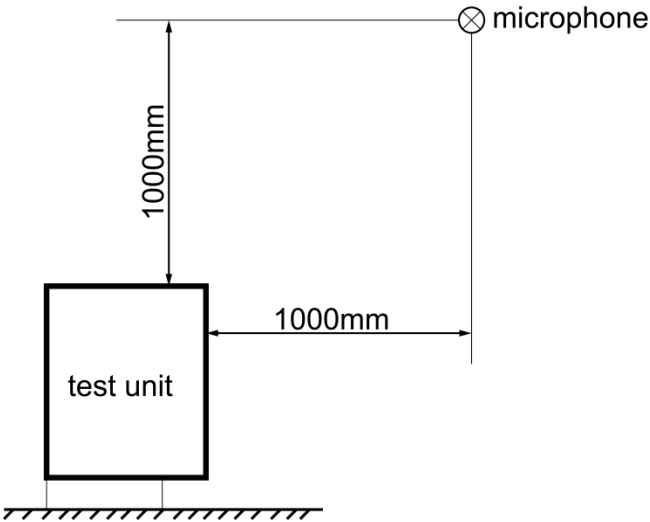

Model F3	-	250	350	700	800
(H/M/L)		43/37/29	52/45/37	65/58/56	64/58/49
(H/M/L)		43/37/29	52/45/37	65/58/56	64/58/49

10. Service Spaces


Cased type

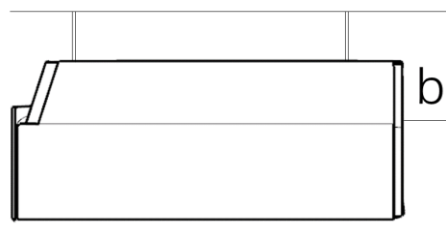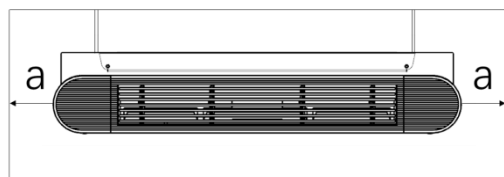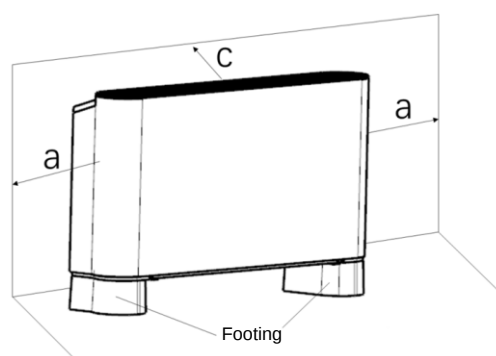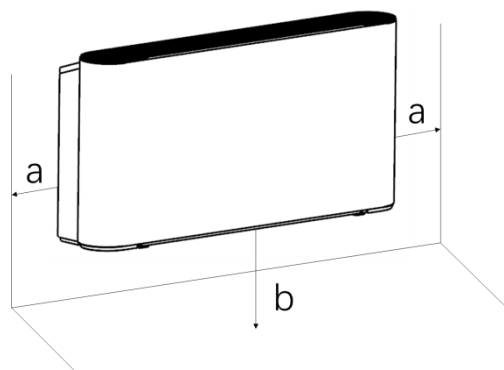

a (mm)	≥ 150
b (mm)	≥ 90
c (mm)	≥ 50


11. Wiring Diagrams

Model: SF-250-350F3

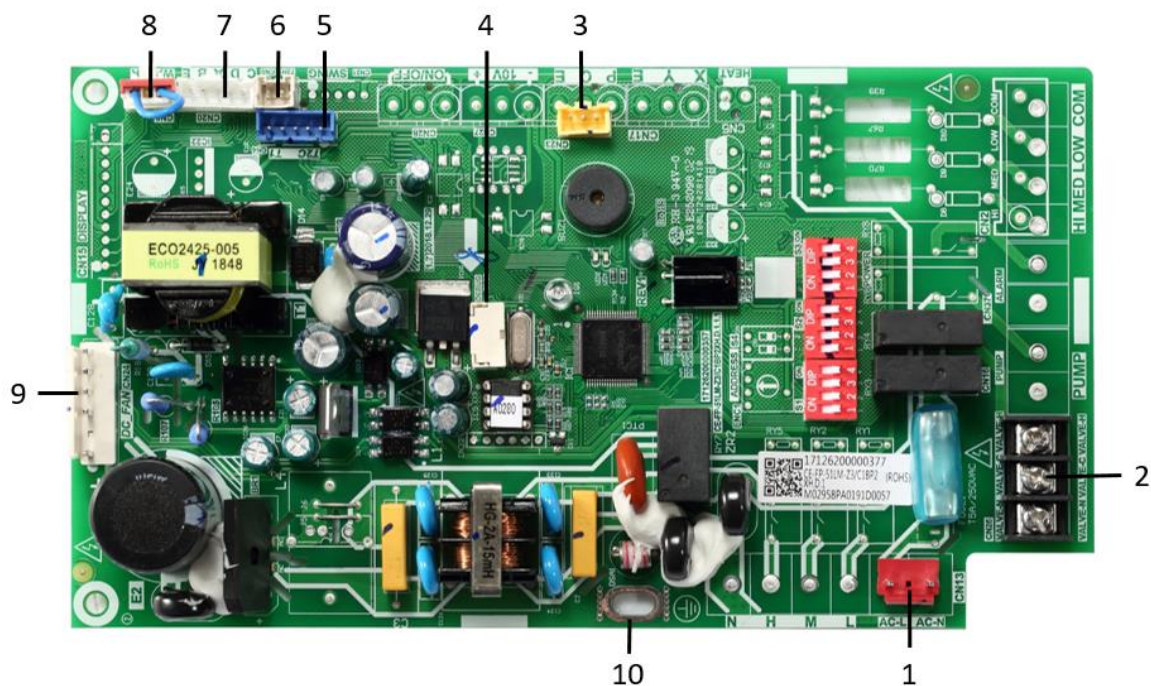


No	Description
1	AC-L: AC power supply live wire
	AC-N: AC power zero wire
2	VALVE-N: Cooling/Heating 2-way valve/3-way valve zero wire
	VALVE-C: Cooling 2-way valve/3-way valve live wire
	VALVE-H: Heating 2-way valve/3-way valve live wire
3	PQE: Communication port
4	DEBUG: Program burn port
5	T2C: Cooling coil temperature sensor
	T1: Room temperature sensor
6	T2H: Heating coil temperature sensor
7	CDABE: wired controller port
8	WATER: Water level switch port (reserved)
9	DC_FAN: DC Fan port
10	Grounding screw

Model: SF-700-800F3

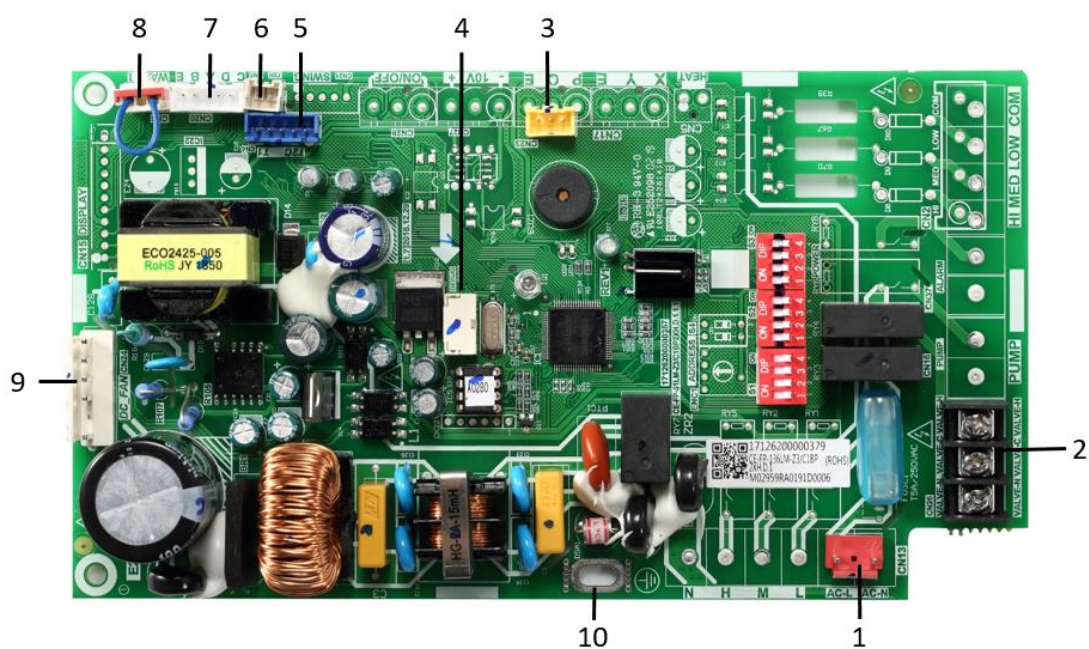



No	Description
1	AC-L: AC power supply live wire
	AC-N: AC power zero wire
2	VALVE-N: Cooling/Heating 2-way valve/3-way valve zero wire
	VALVE-C: Cooling 2-way valve/3-way valve live wire
	VALVE-H: Heating 2-way valve/3-way valve live wire
3	PQE: Communication port
4	DEBUG: Program burn port
5	T2C: Cooling coil temperature sensor
	T1: Room temperature sensor
6	T2H: Heating coil temperature sensor
7	CDABE: wired controller port
8	WATER: Water level switch port (reserved)
9	DC_FAN: DC Fan port
10	Grounding screw

For all the model:

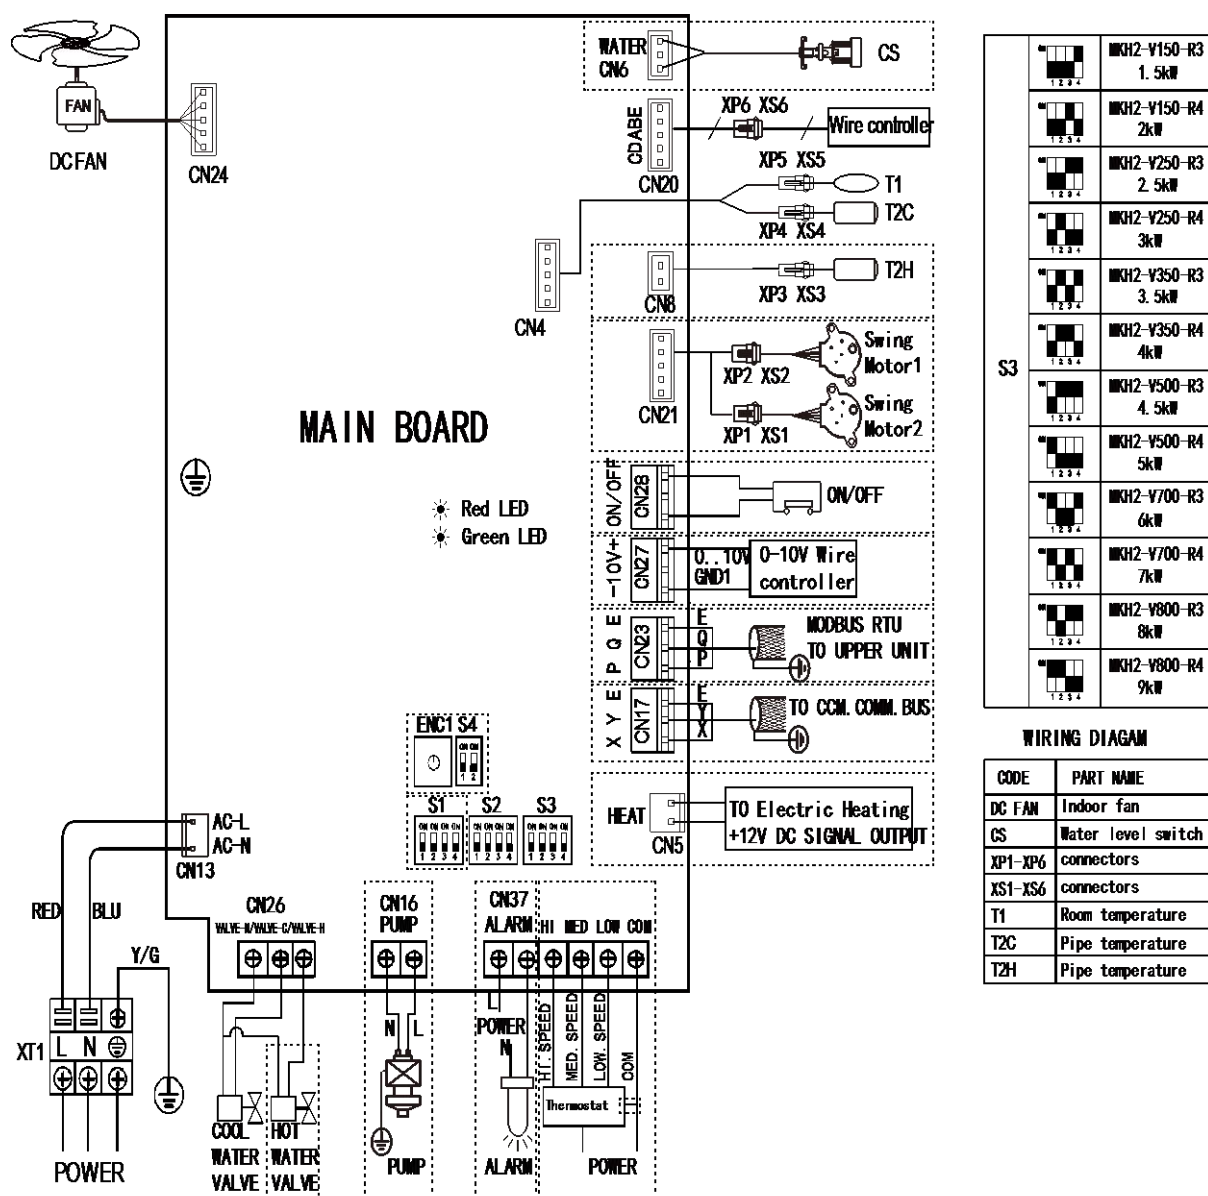

NOTE:

1. ALARM Port: strong signal when a alarm output.
2. ON/OFF Port: When connect, the wire controller and Centralized Controller is invalid. System is equivalent of shutdown.

ENC1 & S4	SWITCH FOR ADDRESS SETTING			Address 0-15	 0  1
	'0-F' of the ENC1 and 'ON/OFF' of the S4, the different position represents a different address. Is be combined 64 address (0-63)			Address 16-31	
				Address 32-47	
				Address 48-63	

S1	S1-1		2 pipe	S2	S2-1/2		Temp. compensation value is 0 under cool mode (default)
			4 pipe				Temp. compensation value is 1 under cool mode
	S1-2		Without enforcement to turn wind				Temp. compensation value is 2 under cool mode
			With enforcement to turn wind				Temp. compensation value is 3 under cool mode
	S1-3		Normal anti-cold wind		S2-3/4		Temp. compensation value is 3 under heat mode (default)
			High temperature anti-cold wind				Temp. compensation value is 1 under heat mode
	S1-4		turn on E-heater and Heating valve				Temp. compensation value is 6 under heat mode
			turn on E-heater, turn off Heating valve				Temp. compensation value is 8 under heat mode


12. Installation

12.1 Transport and handling

Caution:

Do not open or tamper with the packaging before installation. The units should only be moved and lifted by specialized personnel trained in these operations.

Check on arrival that the unit has not been damaged during transport and that it is complete with all its parts.

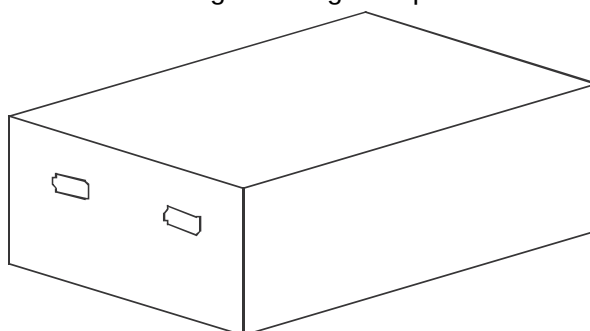

To remove the packaging, please follow below instructions:

1. Check for visible damage.
2. Open the packaging.
3. Check that the manual for use and maintenance are in the packaging.
4. Dispose of the packaging material in accordance with current legislation at the appropriate waste reception or recycling site.

The units may be moved or lifted either by hand or by means of a suitable trolley. If the weight of the unit is more than 30kg, moving units need to be moved at the same time, it is advisable to put the machines in a container and lift them by means of a crane or something similar.

12.2 Storage conditions


Units in packaging may be stacked not more than four-layer, and must be kept under cover.

12.3 Service spaces

Caution:

Incorrect positioning or installation of the unit may amplify noise levels and vibrations generated during operation. Guarantee enough clearances for installation and maintenances.

Cased type

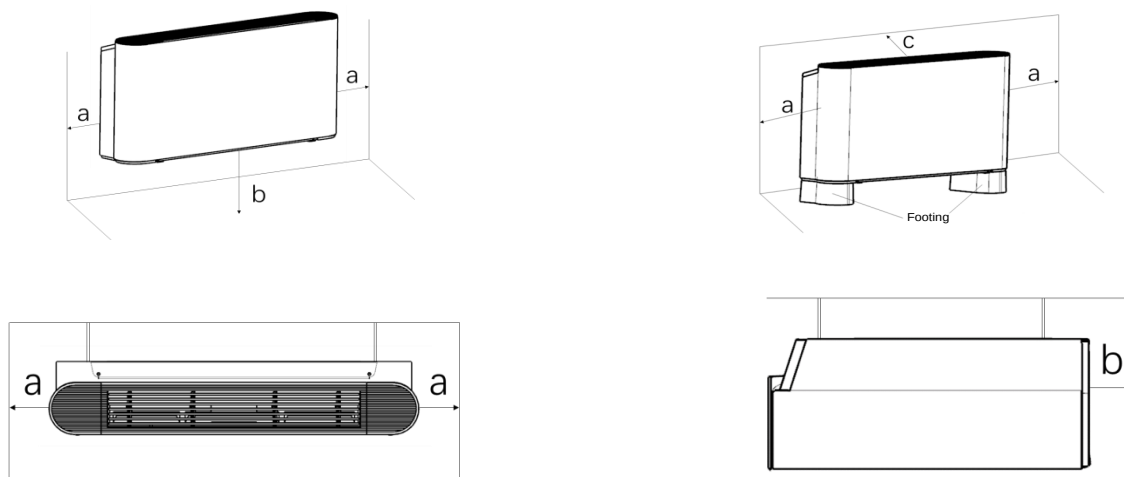

a (mm)	≥ 150
b (mm)	≥ 90
c (mm)	≥ 50

12.4 Units installation

Caution:

Installation must only be carried out by qualified technicians, trained to work with air-conditioning and refrigeration systems. Incorrect installation could lead to unit malfunctioning and a consequent deterioration in performance.

For installation, follow the instructions set out below:

Check the space technically required for installation:

- ♦ Space required for installation.

- ♦ Space required for connecting the liquid lines and other valves.
- ♦ Space required for connecting power supply.
- ♦ Space required for connecting the unit to the external control panel (if any).
- ♦ Space required for setting flow route and air inlet (for specific models).
- ♦ Space required for correct and sufficient air flow.
- ♦ Space required for removing condensate water.
- ♦ Space required for cleaning the filter.
- ♦ Space required for cleaning internal assembly and maintenance.

Remove the casing:

Removing screws ①*2, ②*2 and ③*2 and then the casing as Figure 12.4.1.

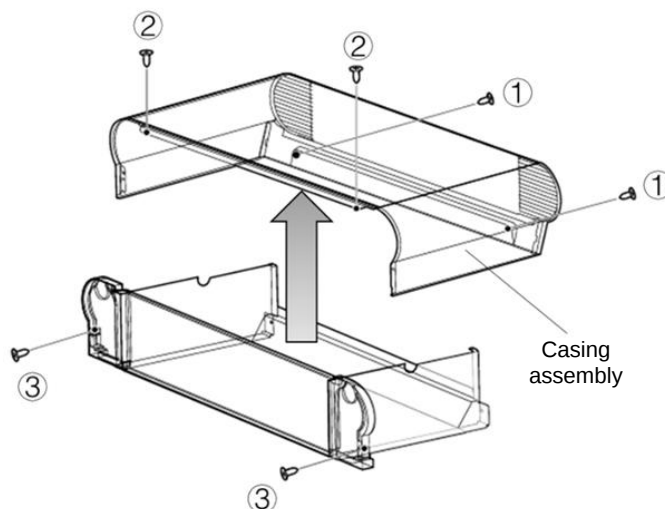


Figure 12.4.1

Mark the places for screws on the wall according to the unit mounting holes or dimensions specified in Figure 12.4.2. The drain pipe for condensate water must be smooth enough to allow unobstructed water discharge.

As shown in Figure 12.4.2, fasten four screws (①) into a proper masonry structure.

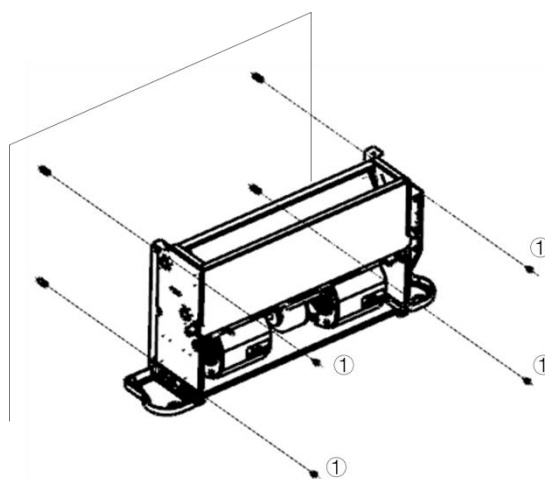


Figure 12.4.2

The footings shown in Figure 12.4.3 are optional. You can purchase them separately and install them as follows:

1. Put the footings beside the unit to be installed.
2. Place the mounting holes on the unit base into the corresponding footing locating pin and install screws ①*2 and ②*2 to fix the footing according to Figure 12.4.3.

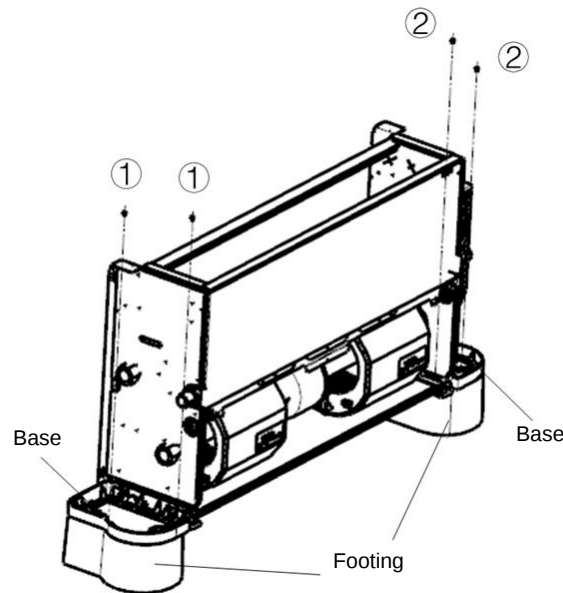


Figure 12.4.3

The footings shown in Figure 12.4.3 are optional. You can purchase them separately and install them as follows:

1. Put the footings beside the unit to be installed.
2. Place the mounting holes on the unit base into the corresponding footing locating pin and install screws ①*2 and ②*2 to fix the footing according to Figure 12.4.3.

Install the unit following the steps below in case it is ceiling mounted.

To match the existing structure, set the screw pitch according to the unit dimensions.

Wooden structure	Original concrete slab structure
Secure the square rod on the beam to set the lifting bolts.	Use embedded bolts, and pull bolts.
Steel framework	Newly set concrete slab structure
Directly set and use an angle steel for support.	Set using embedded appliances, and embedded type of bolts.

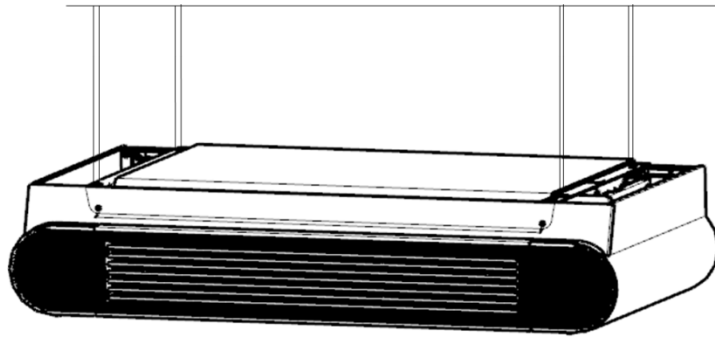


Figure 12.4.4 Diagram of ceiling exposed

Liquid pipe connections

Connect the unit to the water system using inlet and outlet connectors.

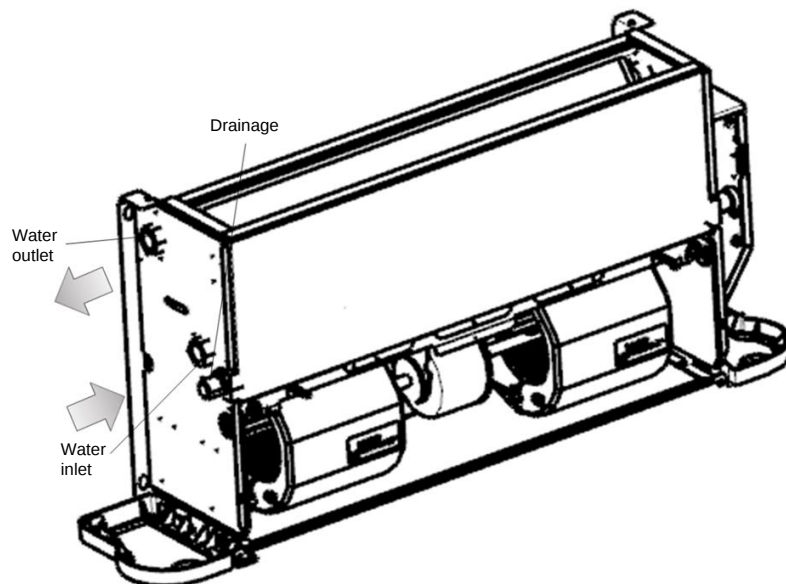


Figure 12.4.6

All water system coils are equipped with discharge and drain valves.
Use a screwdriver or wrench to open and close the valve.

When installation is complete,

- ① Remove air inside pipes.

- ② Wrap the connecting pipes and all the valve body with anti-condensation material (EPDM or PE) of no less than 10 mm thick, or install auxiliary drainage equipment.
- ③ Pour water into the drain pan and check it all the way until you can see water flows from the drain outlet. Alternatively, you may check the drain channel and remove impurities that may obstruct the flow.
- ④ Install the condensate drain system.
- ⑤ The condensate drain system must be properly lowered to ensure water discharge.

Follow the steps below to set the condensate drain system.

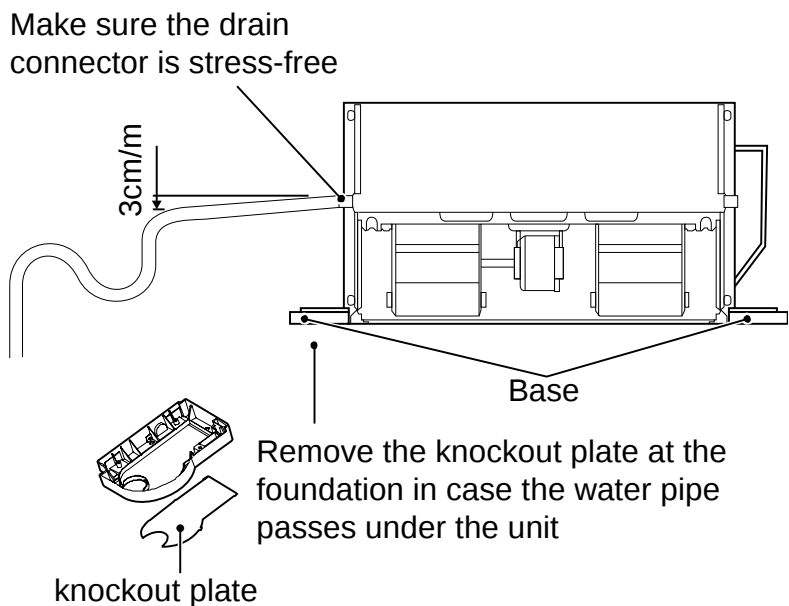


Figure 12.4.7

Set water storage elbow

The condensate drain system must be fitted with a suitable elbow to prevent odour penetration. Follow the steps below to set the elbow.

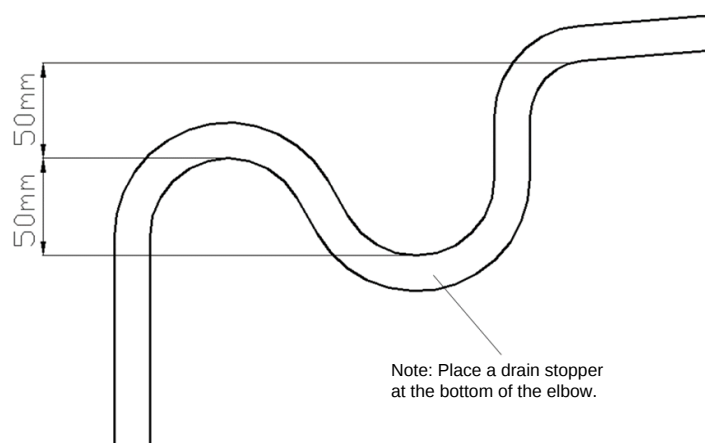


Figure 12.4.8

The customer has to purchase the three-way valve and its accessories (Operation and Installation Manual attached) separately from the manufacturer.

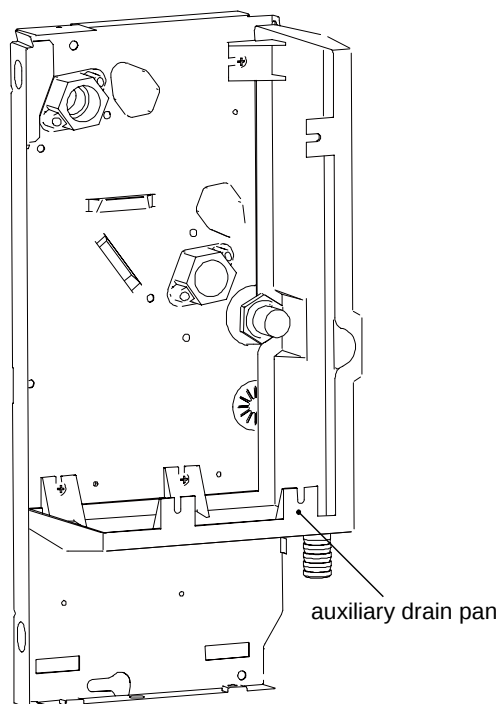


Figure 12.4.9

The customer may also need to purchase the auxiliary drain pan (Figure 12.4.9) separately from the manufacturer if required. See the steps below for installation of auxiliary drain pan:

Electrical connections

Caution:

- ♦ Make sure that the power supply falls with 220-240V~1ph 50Hz/60Hz and is able to provide enough wattage for the unit. The power supply system must comply with the current national safety regulations.
- ♦ The electrical connection must be completed by qualified professionals and must comply with local laws and regulations. The company is not responsible for personal or property damage resulting from any incorrect electrical connections.
- ♦ Provide dedicated and suitable leakage protection device for the unit, with a minimum distance of 3 mm among the wiring contacts. The unit must be grounded reliably.
- ♦ Make sure that the power cord has a large-enough cross section to withstand the maximum current required. Never use a damaged cable.
- ♦ Perform electrical connections according to the wiring nameplate of the unit.
- ♦ Secure the cable using clamps in the electric control box to ensure the safety of the power supply cable and the connection cable.
- ♦ Do not pull, step on or squeeze the cable. Do not use nails or staples to secure the power cord. You need to pass the cable through the knockout hole at the foundation.
- ♦ For this stationary appliance it is required to have for disconnection of mains supply and all-pole switch with a contact opening of at least 3mm in the fixed wiring

Danger!

Always install a general automatic switch in a protected area near the appliance with an adequate capacity characteristic delayed curve with sufficient breaking power. There should be a minimum distance of 3mm between the contacts. Earth connection is compulsory by law to ensure user safety while the machine is in use. Refer to Tables 12.4.1&12.4.2 for the specifications of the power cord and communication wire. A wiring capacity that is too small will cause the electrical wiring to become too hot, and lead to accidents when the unit burns and becomes damaged.

Select the wire diameters (minimum value) individually for each unit based on the Table 12.4.2.

Maximum allowable voltage range variation between phases is 2%.

Select circuit breaker that having a contact separation in all poles not less than 3 mm providing full disconnection, where MFA is used to select the current circuit breakers and residual current operation breakers

Table 12.4.1

Air flow	255-1300m ³ /h
Power supply voltage	220-240V
Power supply phase	1 phase
Power supply frequency	50Hz、60Hz
Circuit breaker / Fuse	15A / 15A
Communication wire between indoor unit and wired controller	Three core shielded wire

Table 12.4.2

Rated current of appliance (A)	Nominal cross-sectional area (mm ²)	
	Flexible cords	Cable for fixed wiring
≤3	0.5 and 0.75	1 and 2.5
>3 and ≤6	0.75 and 1	1 and 2.5
>6 and ≤10	1 and 1.5	1 and 2.5
>10 and ≤16	1.5 and 2.5	1.5 and 4
>16 and ≤25	2.5 and 4	2.5 and 6
>25 and ≤32	4 and 6	4 and 10
>32 and ≤50	6 and 10	6 and 16
>50 and ≤63	10 and 16	10 and 25

Wiring

- ♦ See product wiring nameplate.
- ♦ Check that the voltage and the frequency of the power supply correspond to 220-240V single phase at 50Hz/60Hz; that the available power is sufficient for the running the equipment; and that the supply cables are of adequate section for the maximum current which will be required.
- ♦ Make sure that the power supply system complies with current national safety regulations.
- ♦ Electrical connections must be made in accordance with the wiring diagrams supplied with the machine. For connection to the power supply network, use double-insulated flexible cable, twin pole + earth, section 1.5mm², type H05RN-F.
- ♦ Pass the power supply cable through the slot beside the air filter. Use the cable clamp provided on the inner side of the panel to secure the power supply cable and the connecting cables, and strip only the length of cable needed to go into the connector block. In the event that the unit is mounted on a metal surface, earth connections must be made in compliance with local regulations. If the optional extra electric heating element is fitted, a separate power supply must be provided. Use double-insulated flexible cable, twin pole + earth, section 2.5mm², type H05RN-F.

Startup instructions

Caution:

Machine commissioning or the first startup must be carried out by skilled personnel qualified to work on this type of product.

Before starting up, make sure that the installation and electrical connections have been carried out in accordance with the instructions in this manual. Also make sure that there are no unauthorized persons in the vicinity of the machine during these operations.

Preliminary checks before startup

- ♦ Before starting up the unit, make sure that:
- ♦ The unit is positioned correctly;
- ♦ The flow and return pipes of the water system are correctly connected;
- ♦ The pipes are clean and free of air;

- ♦ The unit falls correctly towards the drainage outlet and the trap;
- ♦ The heat-exchangers are clean;
- ♦ The electrical connections are correct;
- ♦ The screws holding the cables are well tightened;
- ♦ The supply voltage is as required;
- ♦ The power consumption of the blower is correct and does not exceed the maximum permitted.

12.5 Maintenance

Caution:

- ♦ Maintenance work must only be carried out by qualified technicians authorized to work on air-conditioning and refrigeration systems.
- ♦ Use suitable work gloves.
- ♦ Do not use pointed objects through the air intake grilles.
- ♦ Disconnect the power supply before cleaning and maintenance.
- ♦ Use dry cloth to clean the unit.
- ♦ Always disconnect the unit from the mains power supply at the main isolator switch before carrying out maintenance work or checks. Make sure that no one accidentally supplies power to the machine; lock the main switch in the Off position.

Scheduled maintenance

- ♦ Once a month

Check the state of cleanliness of the air filters. The air filters are made of fibre and can be washed in water. The state of cleanliness of the filters must be checked regularly at the start of the operating season and on a monthly basis.

- ♦ Every six months

Check the state of cleanliness of the heat-exchanger and the condensation drain-tube.

Switch off the unit, remove the casing of the machine and check the state of the heat-exchanger and the condensation drain-tube if necessary:

1. Remove any obstacle from the surface which may obstruct air flow;
2. Clean the dust with a jet of compressed air;
3. Wash and brush gently with water;
4. Dry with a jet of compressed air;
5. Check that there are no obstacles in the condensation drain tube which could prevent the normal flow of water.

Release the air in the water system.

1. Remove the casing of the machine (for casing type);
2. Start the system and run for a few minutes;
3. Stop the system;
4. Loosen the release screw on the inlet manifold and release the air.
5. Repeat the operation several times until no more air comes out of the system.

At the end of the season

To avoid the risk of rupture due to freezing, it is advisable to drain the water from the system at the end of every season.

Check the electrical circuit

The following operations are recommended for the maintenance of the electrical circuit:

Tighten the electrical contacts and terminals;

Check the unit's power using a clip-on ammeter and compare with the values shown on the document.

Motor to replace, follow the steps below:

- a) Unplug the unit.
- b) As shown in Figure 12.5.1, remove screws ①*2 and ②*2 and then the casing.

c) As shown in Figure 12.5.2, remove screws ①*2 to take the filter out.

Then, remove the upper volute.

After that, remove four screws (②) that fix the motor, to disconnect the motor cable and the main board. Then, take out the fan and the motor.

Disassemble the fan to get the motor.

Install back the motor in reverse order.

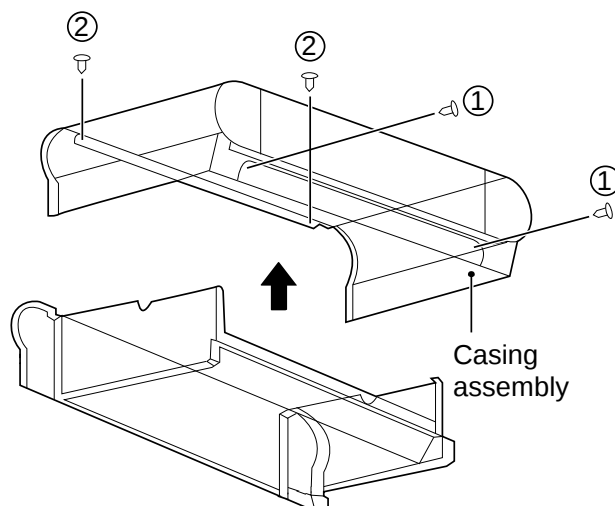


Figure 12.5.1 Removal of casing

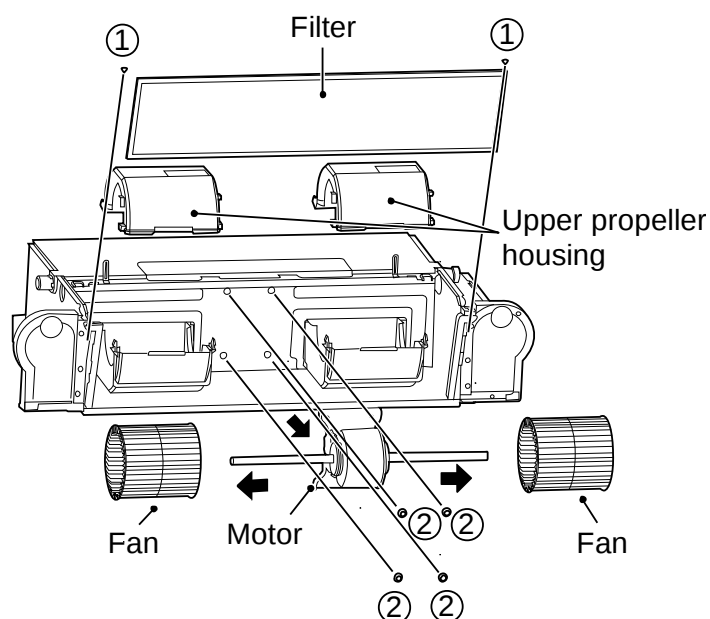


Figure 12.5.2 Removal of filter, upper volute and motor screws

Heat exchanger to replace, follow the steps below:

a) Unplug the unit.

b) Shut off the water supply.

c) As shown in Figure 12.5.3, remove screws ①*2 and ②*2 and then the casing.

d) Drain the coil.

e) Disassemble the inlet and outlet pipes.

f) As shown in Figure 12.5.4, remove screws ①*2 to remove the electric control box.

g) As shown in Figure 12.5.5, remove screws ①*7 to take the drain pan out. Then, remove screws ②*4 to take

the heat exchanger out.

h) Pull out the temperature sensor plug.

Install back the heat exchanger in reverse order

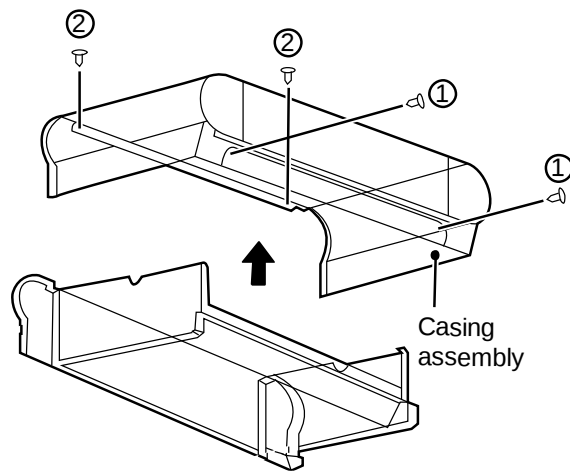


Figure 12.5.3 Removal of casing

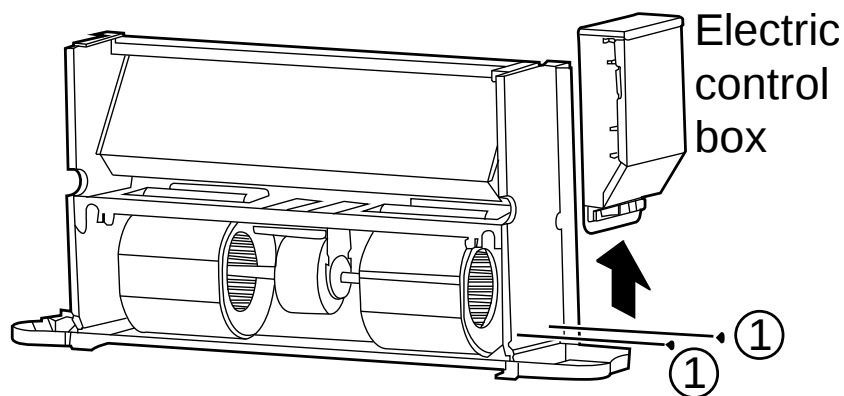


Figure 12.5.4 Removing the electric control box

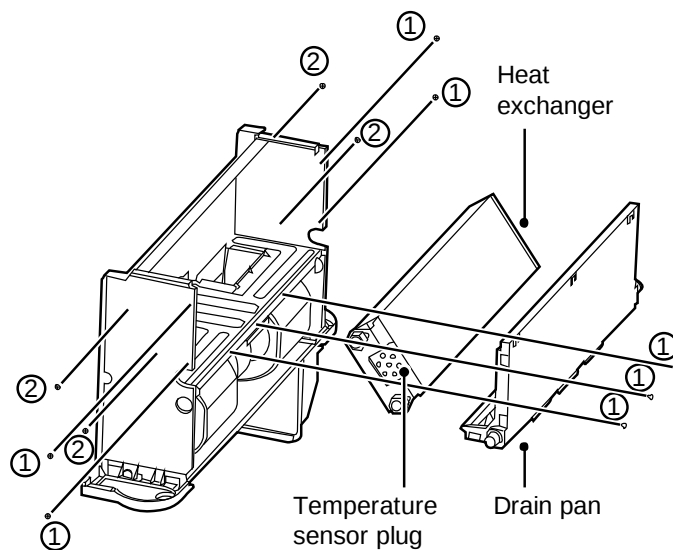


Figure 12.5.5 Removal of drain pan and heat exchanger

If the unit or its parts need(s) to be removed, make sure that:

Only a professional person can disassemble the unit.

The system with antifreeze must not be discarded; otherwise, it will cause pollution. It should be collected and then be disposed off properly.

As a special waste, electronic components must be handled by professional persons together with polyurethane foam, polyurethane and sound absorbing sponge.

12.6 Troubleshooting

The system maintenance must be carried out by qualified maintenance personnel.

Error	Measures
If a safety device, such as a fuse, circuit breaker or a leakage circuit breaker is triggered frequently or the ON/OFF switch is not working properly.	Turn off the main power switch.
The operating switch is not functioning normally.	Turn off the power supply.
If a centralized controller is used, the unit number is displayed on the user interface, and the operating indicator is flickering, and an error code is shown on the screen as well.	Notify the installation personnel and report the error code.

Except as noted above, if the above faults are not typical and the unit still fails, follow the steps below:

Error	Measures
If the system does not run at all.	Check whether there is a power failure. Wait for the power supply to be restored. If a power failure occurs when the unit is still running, the system will restart automatically once the power is restored.
The system is running but there is insufficient cooling or heating.	Check whether the air outlet is blocked by any obstacles. Remove the obstacles. Check whether the filter is blocked. Check the temperature setting. Check the fan speed settings on the user interface. Check whether the doors and windows are open. Close the doors and windows to shut out wind from the external environment. Check whether there are too many people in the room when the cooling mode is in operation. Check whether the heat source of the room is too high. Check whether there is direct sunlight into the room. Use curtains or blinds. Check whether the angle of air flow is appropriate.

Error code overview:

If a centralized controller is used, error codes appear on the user interface. Contact the installation personnel and inform them of the error code, unit model and serial number (you can find the information on the nameplate of this unit).

Refer to Maintenance Manual for troubleshooting:

NO.	Error	Name	Running Indicator	Fault Indicator	Buzzer action	Error Code
1	Error	E ² PROM communication error	Steady on	Flashes once every 3 seconds	Buzzes 2 times every 3 seconds	E7
2	Error	Room temperature sensor port abnormal	Steady on	Flashes 2 times every 3 seconds	Buzzes 2 times every 3 seconds	E2
3	Error	Coil sensor (T2C)port abnormal	Steady on	Flashes 3 times every 3 seconds	Buzzes 2 times every 3 seconds	E3
4	Error	Coil sensor (T2H)port abnormal	Steady on	Flashes 3 times every 5 seconds	Buzzes 2 times every 3 seconds	E4
5	Error	DC motor stall fault	Steady on	Flashes 4 times every 3 seconds	Buzzes 2 times every 3 seconds	E8
6	Protection	Water level exceeding warning line	Blinking	Flashes once every 3 seconds	Buzzes 2 times every 3 seconds	EE
7	Protection	Model protection not set (model DIP switch not listed in the model table)	Blinking	Flashes 2 times every 3 seconds	Buzzes 2 times every 3 seconds	PH
8	Protection	Water temperature protection	Blinking	Flashes 3 times every 3 seconds	Buzzes 2 times every 3 seconds	P1
9	Protection	Anti-freezing protection	Blinking	Flashes 4 times every 3 seconds	Buzzes 2 times every 3 seconds	P0
10	Protection	Remote shutdown	Blinking	Flashes 5 times every 3 seconds	Buzzes 2 times every 3 seconds	P2

Non-Unit Related Faults:

The following fault symptoms are not caused by the unit itself:

1) Fault symptom: Fan speed is not consistent with the setting.

The fan doesn't respond to the controller. In cooling mode, when the pipe water temperature is outside the allowable range of room temperature, the fan speed will be maintained at a low level to avoid direct exposure to hot air. In heating mode, when the pipe water temperature reaches a certain low level, the fan speed will also be maintained at a low level to avoid direct exposure to cold air.

2) Fault symptom: Fan direction is not consistent with the setting.

The fan direction is inconsistent with the direction indicated on the user interface. Swing is a customized function. If the customer customizes this function and the fan direction does not correspond to the set direction, this is because the unit is controlled.

3) Fault symptom: white fog from a certain unit.

This may result from high humidity during cooling mode. If the interior pollution of the fan coil unit is severe, the indoor temperature distribution may be uneven. At this time, you need to clean the inside of the unit. Ask the dealer for information on how to clean the unit. This operation must be carried out by qualified maintenance personnel.

4) Fault symptom: dust and dirt in the unit.

It may happen after the unit is used again after being left idle for a long period. This is because there is dust inside

the unit.

5) Fault symptom: odour from unit.

The unit will absorb the odours of rooms, furniture, cigarettes and others, and then disperse the odours again.

Odour might occur after small animals enter the unit.

NOTE CONCERNING PROTECTION OF ENVIRONMENT



This product must not be disposed of via normal household waste after its service life, but must be taken to a collection station for the recycling of electrical and electronic devices. The symbol on the product, the operating instructions or the packaging indicate such disposal procedures. The materials are recyclable in accordance with their respective symbols. By means of re-use, material recycling or any other form of recycling old appliances you are making an important contribution to the protection of our environment. Please ask your local council where your nearest disposal station is located.

PRODUCER

SINCLAIR CORPORATION Ltd.
1-4 Argyll St.
London W1F 7LD
United Kingdom

www.sinclair-world.com

This product was manufactured in China (Made in China).

REPRESENTATIVE

SINCLAIR EUROPE spol. s r.o.
Purkynova 45
612 00 Brno
Czech Republic

TECHNICAL SUPPORT

NEPA spol. s r.o.
Purkynova 45
612 00 Brno
Czech Republic

Tel.: +420 800 100 285
Fax: +420 541 590 124

www.sinclair-solutions.com
info@sinclair-solutions.com

